


# Panasonic®

## Palmcorder®

Camcorder

### Operating Instructions

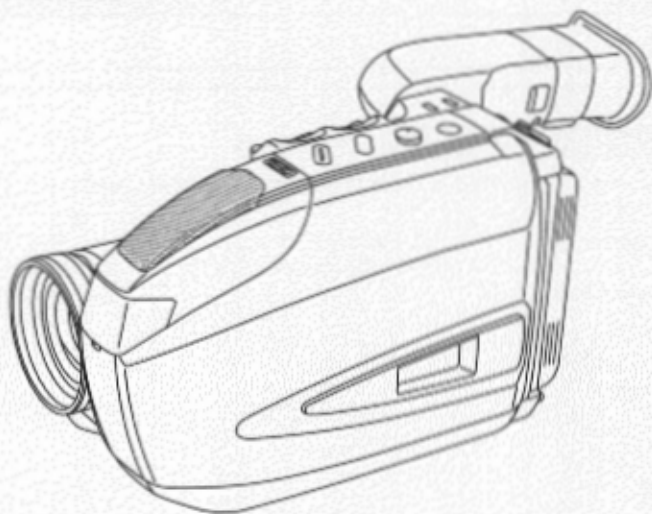

**VHS**

**PV-D209**

150x  
DIGITAL / 26x  
PHASE  
ZOOM

COLOR  
VIEWFINDER

DIGITAL  
EIS  
STABILIZATION

BUILT-IN  
LIGHT

PHRASE  
TITLER

MOTION  
SENSOR

Please read these instructions carefully before attempting to operate this product.  
Please save this manual.

**Guía para rápida consulta en español está incluida.**

**For assistance, call 1-800-211-PANA(7262)**

VQTW0737A

Getting Started

Basic Operation

Special Features

For Your Information

# Things You Should Know

## Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, it will bring you years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located on the underside of your Camcorder. Be sure to **retain this manual** as your convenient Camcorder information source.

Date of Purchase \_\_\_\_\_

Dealer Purchased From \_\_\_\_\_

Dealer Address \_\_\_\_\_

Dealer Phone No. \_\_\_\_\_


Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Unpack your Camcorder

These accessories are provided in order to set up or use your Camcorder.

1 pc. AC Adaptor  
(PV-A17)  
with DC Power Cable  
(page 12)

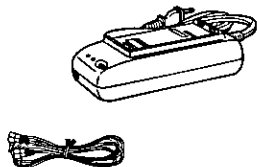


1 pc. Battery Pack  
(PV-BP15) (pages 10, 11)



1 pc. Audio/Video Cable  
(VJAW0027/VJAW0032/  
VJAW0039) (pages 26, 28)



1 pc. VHS PlayPak  
(PV-P1/VYMW0009)  
and one "AA" battery  
(page 27)

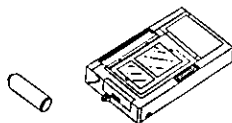

1 pc. Shoulder Strap  
(VYCW0225) (page 14)



1 pc. CR2025 Clock Battery  
(VSBW0004)  
(installed in Camcorder)  
(page 46)



# Things You Should Know





## Safety Precautions

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

Your Compact VHS Camcorder is designed to record and play back in Standard Play (SP) and Super Long Play (SLP) modes. You can also play a Compact VHS Camcorder recording on your VHS VCR using the VHS PlayPak supplied.

This Camcorder is equipped with the **HQ** System to provide excellent video pictures, and is compatible with standard VHS equipment.

It is recommended that only cassette tapes that have been tested and inspected for use in VCR machines with the **VHS-C** and/or **VHS** mark be used.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</b>		
	This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.	
	This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.	

The above markings are located on the appliance bottom cover.

**FCC Warning:** Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with Part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when operated in a residential environment.

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, use the equipment in another location and/or utilize an electrical outlet different from that used by the receiver.


If necessary, consult the dealer or an experienced radio/TV technician for help. You may find the booklet, 'Something About Interference' available from FCC local regional offices helpful.

# Important Safeguards

1. **Read Instructions** — All the safety and operating instructions should be read before the unit is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the unit and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and maintenance instructions should be followed.
5. **Cleaning** — Unplug this video unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth for cleaning.
6. **Attachments** — Do not use attachments not recommended by the video product manufacturer as they may be hazardous.
7. **Water and Moisture** — Do not use this video unit near water — for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. **Accessories** — Do not place this video unit on an unstable cart, stand, tripod, bracket, or table. The video unit may fall, causing serious injury to a child or adult, and serious damage to the unit. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video unit. Any mounting of the unit should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. **Ventilation** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video unit and to protect it from overheating. These openings must not be blocked or covered. Never place the video unit on a bed, sofa, rug, or other similar surface, or near or over a radiator or heat register. This video unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **Power Sources** — This video unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video units intended to be operated from battery power, or other sources, refer to the operating instructions.



11. **Grounding or Polarization** — This video unit may be equipped with either a polarized 2-wire AC (Alternating Current) line plug (a plug having one blade wider than the other) or 3-wire grounding type plug, a plug having a third (grounding) pin. The 2-wire polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. The 3-wire grounding type plug will fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
12. **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords of plugs, convenience receptacles, and the point where they exit from the unit.
13. **Outdoor Antenna Grounding** — If an outside antenna or cable system is connected to the video unit, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Part 1 of the Canadian Electrical Code, in USA Section 810 of the National Electrical Code, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

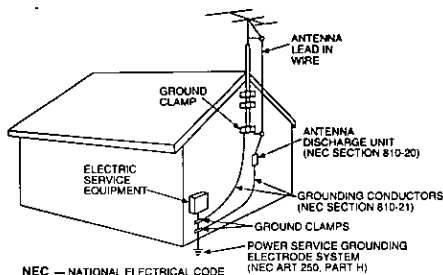

14. **Lightning** — For added protection of this video unit receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video unit due to lightning and power-line surges.

# Important Safeguards

15. **Power Lines** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. **Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
17. **Objects and Liquids** — Never push objects of any kind into this video unit through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the video unit.
18. **Servicing** — Do not attempt to service this video unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service** — Unplug this video unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If any liquid has been spilled onto, or objects have fallen into the video unit.
  - c. If the video unit has been exposed to rain or water.
  - d. If the video unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video unit to its normal operation.
  - e. If the video unit has been dropped or the cabinet has been damaged.
  - f. When the video unit exhibits a distinct change in performance — this indicates a need for service.
20. **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. **Safety Check** — Upon completion of any service or repairs to this video unit, ask the service technician to perform safety checks to determine that the video unit is in safe operating order.

## Precautions

### USE & LOCATION

- **TO AVOID SHOCK HAZARD** ... Your Camcorder and power supply should not be exposed to rain or moisture. Do not connect the power supply or operate your Camcorder if it gets wet. Your Camcorder has been designed for outdoor use, however it is not designed to sustain direct exposure to water, rain, sleet, snow, sand, dust, or a direct splashing from a pool or even a cup of coffee. This action could permanently damage the internal parts of your Camcorder. Do not attempt to disassemble this unit. There are no user serviceable parts inside. Unplug your Camcorder from the power supply before cleaning.
- **DO NOT AIM YOUR CAMCORDER AT THE SUN OR OTHER BRIGHT OBJECTS.**
- **DO NOT LEAVE THE CAMCORDER WITH THE EVF AIMED DIRECTLY AT THE SUN AS THIS MAY CAUSE DAMAGE TO THE INTERNAL PARTS OF THE EVF.**
- **DO NOT EXPOSE YOUR CAMCORDER TO EXTENDED HIGH TEMPERATURE** ... Such as, in direct sunlight, inside a closed car, next to a heater, etc... This action could permanently damage the internal parts of your Camcorder.
- **AVOID SUDDEN CHANGES IN TEMPERATURE** ... If the unit is suddenly moved from a cold place to a warm place, moisture may form on the tape and inside the unit.
- **DO NOT LEAVE YOUR CAMCORDER OR THE POWER SUPPLY TURNED ON WHEN NOT IN USE.**
- **STORAGE OF YOUR CAMCORDER** ... Store and handle your Camcorder in a manner that will not subject it to unnecessary movement (avoid shaking and striking). Your Camcorder contains a sensitive pick-up device which could be damaged by improper handling or storage.

### CARE

- **TO CLEAN YOUR CAMCORDER** ... Do not use strong or abrasive detergents when cleaning your Camcorder body.
- **TO PROTECT THE LENS** ... Do not touch the surface of the lens with your hand. Use a commercial camcorder lens solution and lens paper when cleaning the lens. Improper cleaning can scratch the lens coating.
- **TO PROTECT THE FINISH OF YOUR CAMCORDER** ... Before handling your Camcorder, make sure your hands and face are free from any chemical products, such as suntan lotion, as it may damage the finish.

# Table of Contents

## Getting Started

Things You Should Know .....	2
Important Safeguards .....	4
Precautions .....	5
Self Demo Mode .....	7
Quick Operation Guide .....	8
Supplying Power .....	10
Cassette Information .....	13
Attaching Shoulder Strap .....	14
MENU Mode .....	15
Setting the Clock .....	17
Built-in Auto Light .....	20

## Basic Operation

Camera Recording .....	21
Playing Back Recordings .....	25
Copying your Tapes (dubbing) .....	28

## Special Features

Four-Speed Power Zoom .....	29
Backlight .....	29
Focus .....	30
High Speed Shutter .....	31
Tally Lamp .....	32
Auto Fade .....	33
Color Digital Fade .....	34
Digital Zoom .....	35
Digital Electronic Image Stabilization (E.I.S.) .....	36
Security Mode .....	37
Time Lapse .....	38
Intelligent Titler .....	39

## For Your Information

Electronic Viewfinder Indications .....	42
Operation Notes .....	45
Replacing Clock Battery .....	46
Palmcorder Accessory System .....	47
Palmcorder Accessory Order Form .....	48
Specifications .....	49
Before Requesting Service .....	50
Request for Service Notice .....	51
Warranty .....	52
Index .....	54
Spanish Quick Use Guide/Guía Para Uso Rápido .....	55

# Self Demo Mode

Self Demo mode is on when the screen at the right appears. Follow the steps below to turn it off.


## Before you begin...

- Connect Camcorder to power source.

### EVF Screen

**Panasonic**

ITS TAPES PLAY  
IN YOUR VCR  
YES, IT'S VHSI  
26x LENS / 150x D. ZOOM  
DIGITAL STABILIZATION  
FULL-SIZE HEAD SYSTEM  
AUTO/PHRASE TITLER

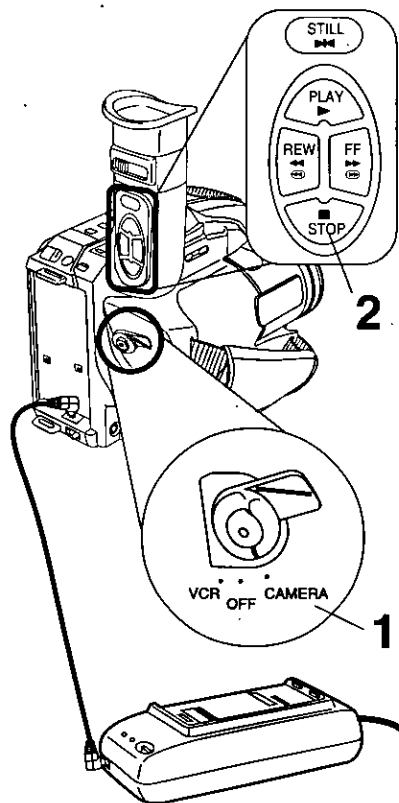

**1** Set POWER to CAMERA.

**2** Hold down STOP over 5 seconds.

### Note:

- Self Demo stops automatically if battery is attached (page 10) and cassette tape is inserted (page 13).
- Inserting a tape alone (or attaching a partially charged battery) only temporarily stops Self Demo.
- Self Demo stops for 30 seconds when a function key other than Power, Tape Speed Selector, and Light is pressed.

### To turn Self Demo back on.


- With DISPLAY held down, slide POWER to CAMERA and wait for Self Demo to begin.

# Quick Operation Guide

## Charge the Battery Pack

Charge Battery Pack fully before operation (page 10).


- 2** Insert **Battery**. **CHARGE**  
Lamp lights and then goes  
out when charging is  
done.

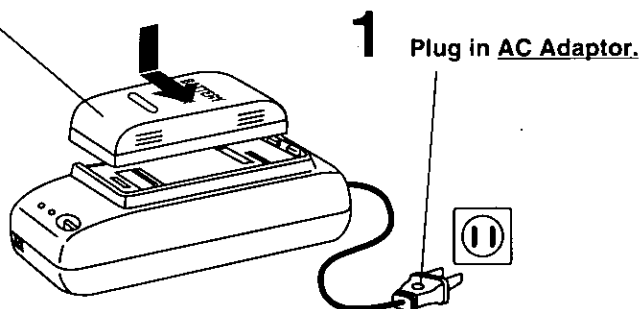

- 1** Plug in **AC Adaptor**.

## Insert Cassette

- 2** Slide **TAPE EJECT** to open door.

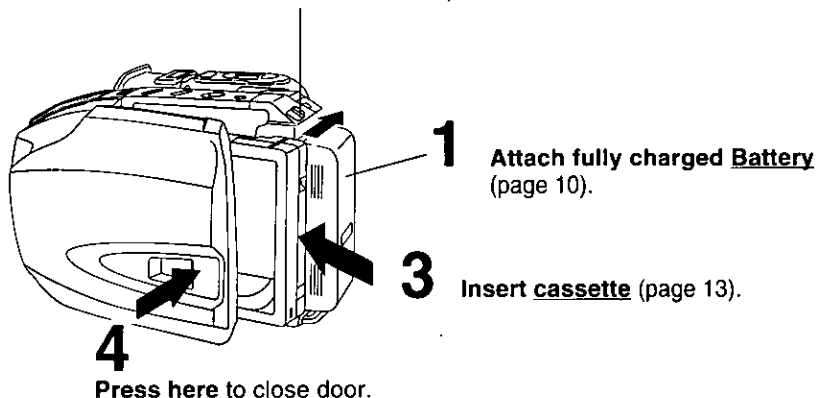

- 1** Attach fully charged **Battery**  
(page 10).

- 3** Insert **cassette** (page 13).

- 4** Press here to close door.




# Quick Operation Guide


## Camera Recording

### Before you begin...

- Charge Battery Pack fully before operation (page 10).

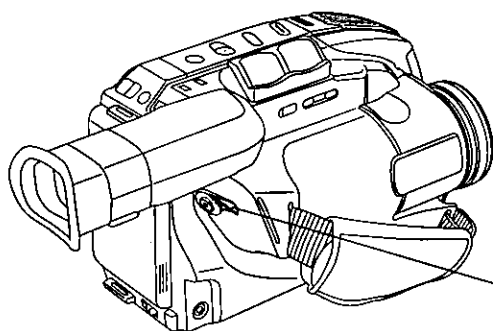


- 2** Press RECORD/PAUSE to start recording.  
Press RECORD/PAUSE again to pause recording.

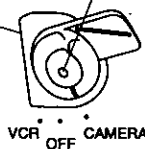


- 1** Set POWER to CAMERA.

## Playback using the Color EVF

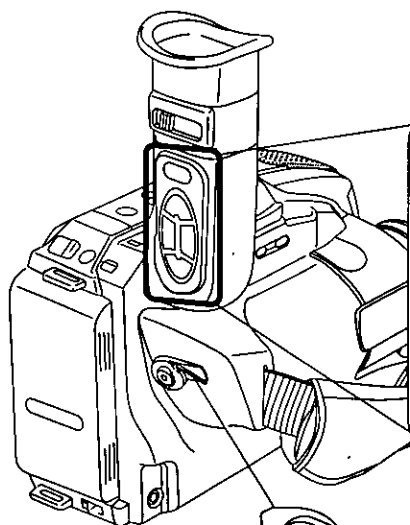


- 2** Press REWIND/SEARCH to rewind tape.

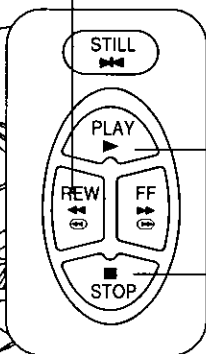

- 3** Press PLAY to start playback.

- 4** Press STOP to stop playback.

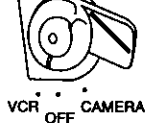


- 1** Set POWER to VCR.

# Supplying Power

## Charge the Battery Pack

Charge Battery Pack fully before use.

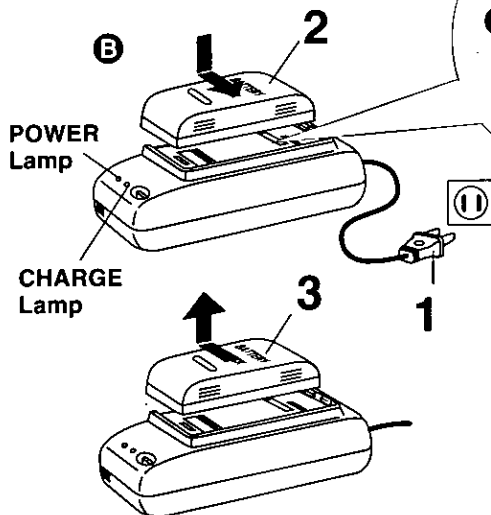

### 1 Plug in AC Adaptor.

POWER Lamp lights.

### 2 Insert Battery.

**A** Align right side of Battery with line on AC Adaptor.

**B** Press Battery down and slide in direction of arrow.

CHARGE Lamp lights and then goes out when charging is done (approx. 1 hour).

### 3

### Remove Battery.

Slide Battery out and off.

- Battery life gradually decreases after repeated use and recharging. If operation time becomes very short even after a sufficient charge, discard Battery properly (page 11).

### Note:

After recharging 5 times, use BATTERY REFRESH feature as explained on page 11.


### Battery Charging Confirmation Marker



Use this marker as a reminder to yourself when the battery is fully charged or in need of a charge. This marker performs no function and is for your reference only.

## Use the Battery Pack

A fully charged Battery provides a maximum of about 1 hour 10 minutes of continuous use. Actual time may vary due to operating conditions. Using the Built-in Light decreases operating time.

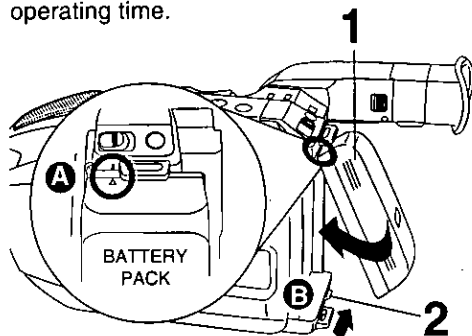

### 1 Attach Battery

**A** Align Battery with top of mounting surface.

**B** Press and snap into place.

### 2

### Remove Battery


While sliding BATTERY RELEASE, remove Battery.

# Supplying Power

## Battery Refresh

This feature completely discharges Battery before recharging begins. Use after about every 5 charges for optimum Battery performance.

CHARGE Lamp

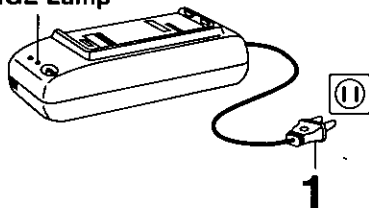

1

Plug in **AC Adaptor**.

- POWER Lamp stays on as long as Adaptor is plugged in.

2

Place **Battery** into Adaptor.

3

Press **BATTERY REFRESH**.


The CHARGE Lamp flashes during discharge then stays lit until charging is complete.

If BATTERY REFRESH is pressed by mistake, remove Battery from Adaptor and reinsert it for normal charging.

4

Remove **Battery**.

- Charging takes about 5 hours when Battery Refresh is used.
- Battery will not operate in extremely high temperatures.

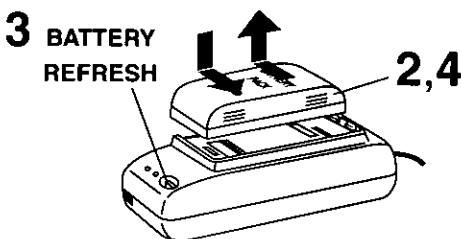

## Battery Care

### Caution:

- Charge only with specified charger.
- Battery can be charged within a temperature range of 50° F (10° C) and 95° F (35° C).
- Battery is normally warm after charging or just after use.
- Do not use an insufficiently charged or worn-out Battery.

### Safety precautions:

- Do not get Battery near, or dispose of in fire.
- Do not directly connect (short circuit) the positive (+) and negative (-) terminals.
- Never attempt to disassemble or reassemble Battery.

### To avoid Battery damage:

- Do not drop or jar Battery.
- Use Battery with specified units only.
- If Battery is used in extremely high temperatures, a safety device will automatically prevent operation.

### To prolong Battery life:

- While not in use, remove Battery from the Camcorder and AC Adaptor and store in a cool, dark, dry place.
- Keep Battery terminals clean.

## U.S.A. CONSUMERS:


### ATTENTION:

The product you have purchased is powered by a nickel cadmium battery which is recyclable. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.



# Supplying Power

## AC Adaptor

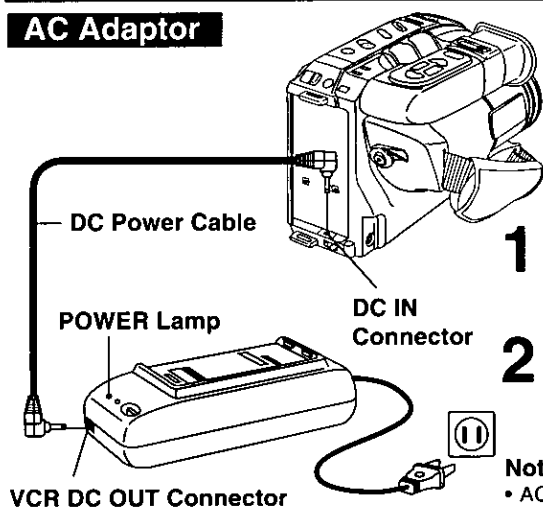

**1** Connect AC Adaptor VCR DC OUT to Camcorder DC IN with supplied DC Power Cable.

**2** Plug in AC Adaptor. POWER Lamp lights.


### Notes:

- AC Adaptor cannot power Camcorder while charging Battery.
- When not in use, unplug AC Adaptor from AC outlet. (Adaptor uses 1.2 W of electricity while plugged in.)

### CAUTION:

This unit will operate on 110/120/220/240V AC. An AC plug adaptor may be required for voltages other than 120V AC. Please contact either a local or foreign electrical parts distributor for assistance in selecting an alternate AC plug. We recommend using the accessory power plug adaptor (VJSS0070) in an area which has special AC outlets.

## Car Battery Cord (Optional)

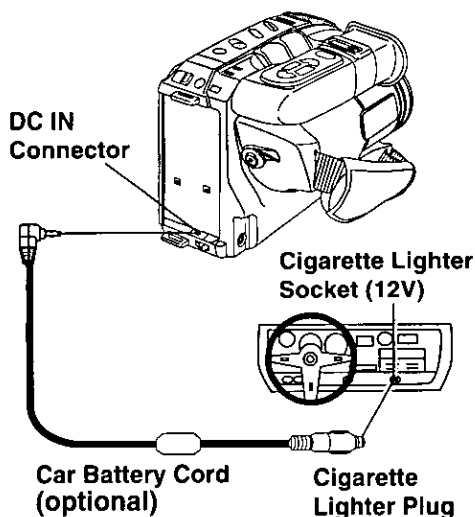

**1** Connect PV-C16 Car Battery Cord (optional) to Camcorder DC IN.

**2** **A** Start engine first.  
**B** Plug Car Battery Cord into Cigarette lighter socket.


- If Car Battery cord fuse needs replacing, use exact current rating (in amps).

### Notes:

- This cord only works in vehicles equipped with **DC 12V (negative ground)** battery. Check with your car/truck dealer. Use only specified car battery cord.
- To avoid blowing the car battery cord fuse, do step 2 in the proper order.
- Running vehicles must be well ventilated.
- When not in use, disconnect cigarette lighter plug.

# Cassette Information

## Cassette Insertion/Removal

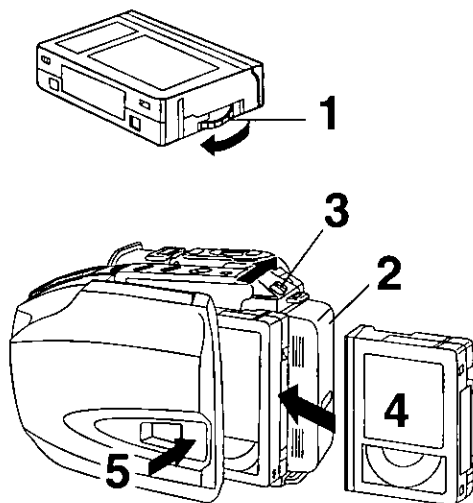

- 1 Turn **Tape Wheel** in direction of arrow until there is no slack.
- 2 Attach **Battery** (page 10).
- 3 Slide **TAPE EJECT** to open door.
- 4 Insert **cassette** as shown.
- 5 Press here to close door.

• To remove the cassette, slide the **TAPE EJECT** switch.


## Record/Playback Time

Use tapes with the **VHSC** mark in this unit.

Tape Speed Selector Position	Cassette type		
	TC-20	TC-30	TC-40
<b>SP</b> (Standard Play)	20 minutes	30 minutes	40 minutes
<b>SLP</b> (Super Long Play)	1 hour	1 hour 30 minutes	2 hours


• SLP playback may contain more picture noise.

## TAPE SPEED Selector

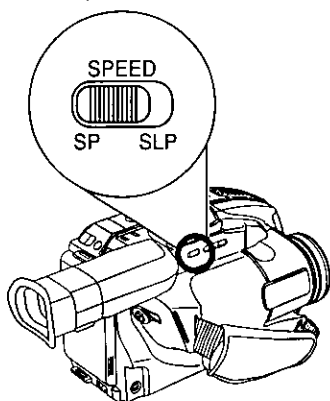

## Erase Protection Tab


A record tab ensures recordings are not accidentally erased.

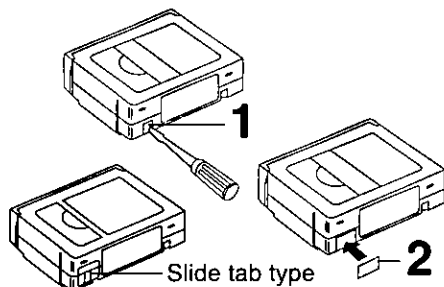


- 1 To prevent erasure, **break off tab** with screwdriver.. (Or, slide tab open.)
- 2 To record again, **cover hole** with adhesive tape. (Or, slide tab closed.)

# Attaching Shoulder Strap

 
Remove Battery Pack before doing steps.



- 1** Undo strap ends from buckles.

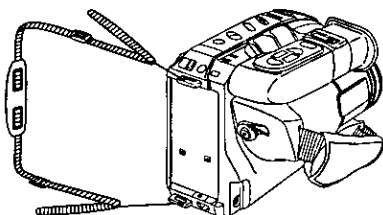

 
- 2** Thread strap ends through Strap Rings on Camcorder.



min. 1 inch (25.4mm)


- 3** Re-insert the strap ends into buckles.

## Adjusting the Length

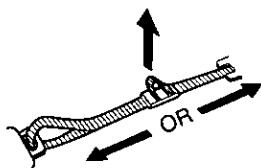

- 1** Pull a loop of strap from buckle.
- 2** Pull strap tight to shorten or lengthen.

## Hand Strap

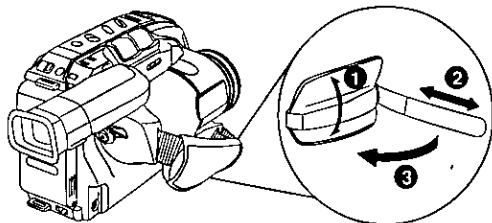


Adjust Hand Strap length to fit your hand as shown.


## Using MENU Mode

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

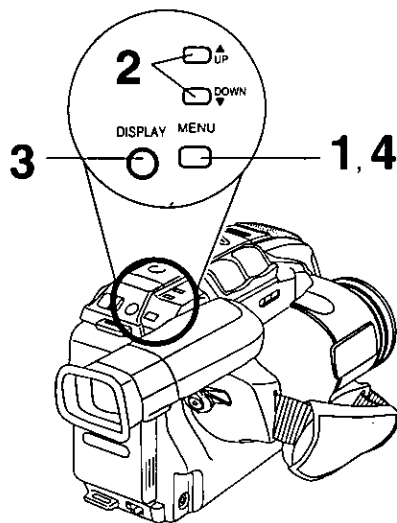

- 1** Press MENU for MENU mode.

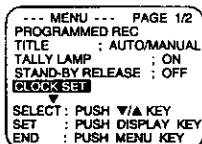

- 2** Press UP  $\blacktriangledup$  or DOWN  $\blacktriangledown$  to highlight menu item.

- 3** Press DISPLAY to set selection.



- 4** Press MENU to exit.

### Note:

- The Menu mode is canceled if UP/DOWN( $\blacktriangledup/\blacktriangledown$ ), DISPLAY, or MENU are not pressed within 5 minutes.

# MENU Mode

## MENU Mode Screen

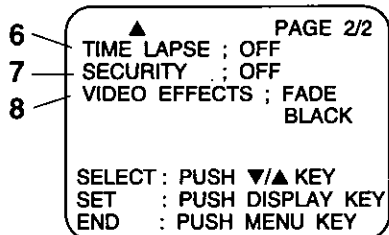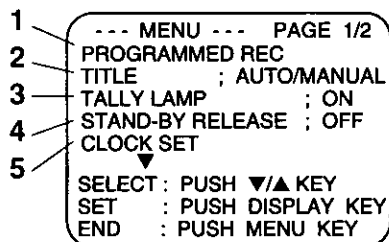

- 1 **PROGRAMMED REC** (page 24).  
Camcorder starts and stops recording at a preset time.
- 2 **TITLE** (pages 39~41).  
AUTO/MANUAL : 16 items  
PHRASE : 10 items
- 3 **TALLY LAMP** (page 32).  
ON: lamp lights during recording.
- 4 **STAND-BY RELEASE** (page 22).  
ON: enables quick resumption of recording from Stand-by mode.
- 5 **CLOCK SET** (pages 17~19).  
Select to set clock.
- 6 **TIME LAPSE** (page 38).  
ON: enables TIME LAPSE recording.
- 7 **SECURITY** (page 37).  
MOTION: enables Motion Security recording.
- 8 **VIDEO EFFECTS** (pages 33, 34).  
AUTO FADE : BLACK or WHITE  
DIGITAL FADE : TYPE → 7 types  
COLOR → 8 colors



# Setting the Clock

Set the following items in order: Time Zone, Daylight Saving Time, Date and Time.

## Setting the Time Zone


The Camcorder is preset to Eastern time. To change time zone, do steps at right.

### Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

### Note:

- Setting **POWER** to **VCR** also displays **CLOCK SET** menu.
- Clock may lose or gain up to 2 minutes per month. To adjust, see page 19.

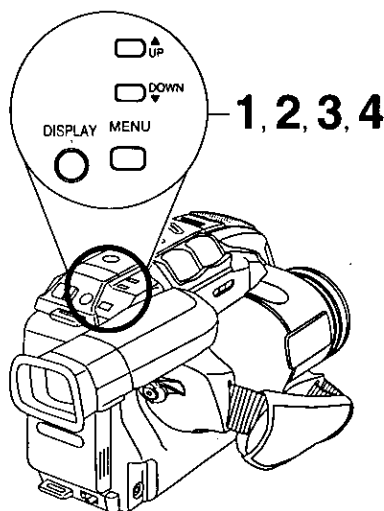

- 1 Press **MENU** for **MENU** mode. Press **UP ▲** or **DOWN ▼** to select **CLOCK SET**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
    
```

- 2 Press **DISPLAY** for **CLOCK SET** menu. Press **UP ▲** or **DOWN ▼** to select **TIME ZONE**.

```

--- CLOCK SET ---
TIME ZONE : EASTERN
D.S.T. : AUTO
DATE / TIME : 12:00 : 00AM
JAN 1 1998
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
    
```

- 3 Press **DISPLAY** for **SELECT TIME ZONE** menu. Press **UP ▲** or **DOWN ▼** to select local time zone.


```

--- SELECT TIME ZONE ---
ATLANTIC      PACIFIC
EASTERN     ALASKA
CENTRAL       HAWAII
MOUNTAIN      SAMOA
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
    
```

- 4 Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.

- When traveling, repeat these steps and select one of the 8 listed time zones to set the clock to local time.

### Time Zone chart

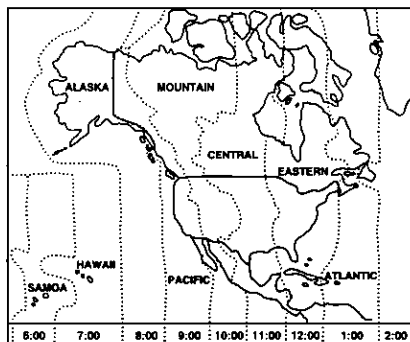

### Note:

When traveling outside the listed time zones, set clock to local time manually (page 19).

# Setting the Clock

## Auto Daylight Saving Time

Clock will auto-adjust to daylight-saving time (DST).


The Camcorder is preset to DST: **AUTO**. If DST is not observed in your area, set to **OFF** by doing the following steps.

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

### Note:

- When **POWER** is set to **VCR**, **CLOCK SET** menu appears.
- Auto DST does not function if time zone is set to Hawaii or Samoa (page 17).

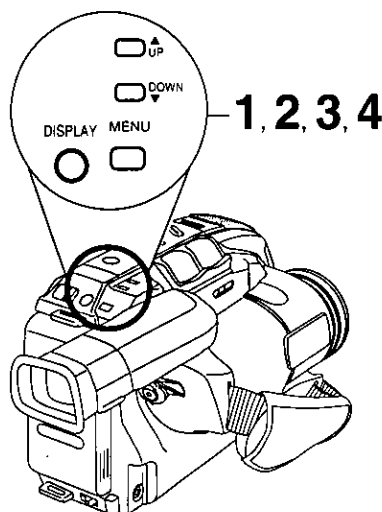

1

Press **MENU** for **MENU** mode.

Press **UP ▲** or **DOWN ▼** to select **CLOCK SET**.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

2

Press **DISPLAY** for **CLOCK SET** menu. Press **UP ▲** or **DOWN ▼** to select **D.S.T.**

```
--- CLOCK SET ---
TIME ZONE : EASTERN
D.S.T. : AUTO
DATE/TIME : 12:00:00AM
JAN 1 1999
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
```

3

Press **DISPLAY** for **DAYLIGHT SAVING TIME** menu. Press **UP ▲** or **DOWN ▼** to select **OFF** or **AUTO**.


```
--- DAYLIGHT SAVING TIME ---
AUTO
OFF
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
```

4

Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.


### Spring (First Sunday in April):

DST: AUTO = ahead one hour.

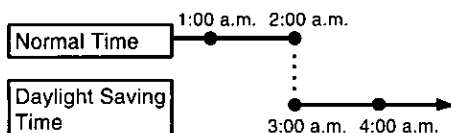

### Autumn (Last Sunday in October):

DST: AUTO = back one hour.

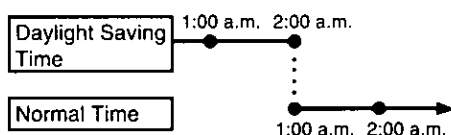

# Setting the Clock

## Setting Date and Time


Date and time including leap year are calculated up to DEC 31, 2097.

### Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

#### Note:

- When **POWER** is set to **VCR**, **CLOCK SET** menu appears.

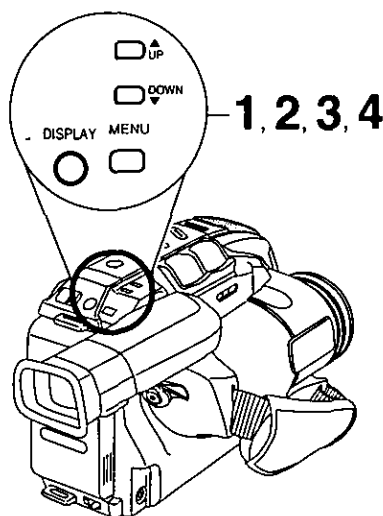

1

Press **MENU** for **MENU** mode.  
Press **UP** ▲ or **DOWN** ▼ to select **CLOCK SET**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE      : AUTOMANUAL
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

2

Press **DISPLAY** for **CLOCK SET** menu. Press **UP** ▲ or **DOWN** ▼ to select **DATE/TIME**.

```

--- CLOCK SET ---
TIME ZONE : EASTERN
D.S.T.    : AUTO
DATE/TIME : 12:00:00AM
              JAN 1 1999
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
END    : PUSH MENU KEY
    
```

3

Press **DISPLAY** for **DATE/TIME** menu.

```

--- DATE/TIME SETTING ---
12:00:00AM
JAN 1 1999
SELECT : PUSH ▼/▲ KEY
SET    : PUSH DISPLAY KEY
    
```


4

Press or hold down **UP** ▲ or **DOWN** ▼ to select hour, then press **DISPLAY** to fix.

Repeat for minute, month, day, and year. Clock starts when year is entered.

Press **MENU** twice to exit.



### EXAMPLE

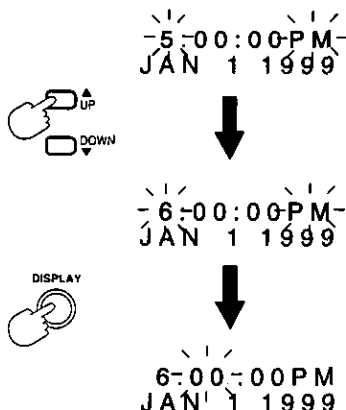

# Built-in Auto Light

## Using the Light

For recording in dim lighting.

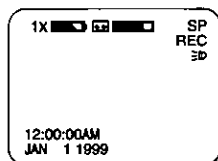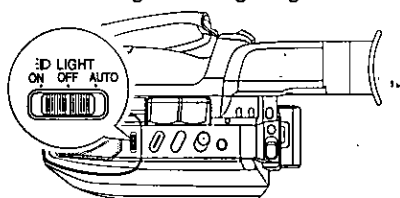

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

## Set **LIGHT** to **AUTO**.

Light turns on/off automatically according to lighting conditions.


Or, set **LIGHT** to **ON/OFF** manually.

☞ appears in EVF when Light is on.

## Caution:

Light becomes hot. Never cover Light while on.

## Replacing the Bulb

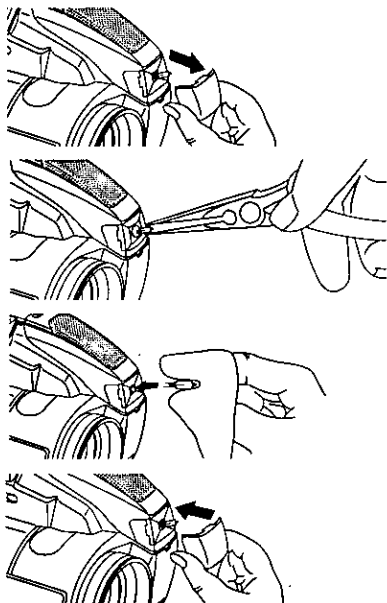

## Before you begin...

- Order Part No. **VULS0001** (VLLW0015 and cushions) for replacement bulb unit.
- Set **POWER** to **OFF**.

**1**

Press in on both sides of lens cover and pull straight out and off.

**2**

Using Tweezers or needle-nose pliers, carefully remove bulb.

- Take unit to service center if you need assistance.

**3**

Replace bulb using a clean cloth or tissue.

**4**

Replace lens cover.

## DANGER:

Use only replacement bulb (PART NO. VLLW0015) supplied by Panasonic to reduce risk of fire.

Handle new bulb with cloth or tissue as skin oils will decrease bulb life.

Remove lens cover and allow bulb to cool before replacing to avoid possible burn hazard.



## Note:

- Using Light reduces battery operating time.
- Provide proper ventilation when using Light extensively in hot environment.
- Using Light when the Camcorder is powered by a car battery may shorten bulb life.
- Set Light to OFF when not in use.
- Handle bulb gently. Excessive force may cause bulb to crack.

# Camera Recording

## Simple Recording

Built-in Twin Capsule  
2-Way Microphone  
System

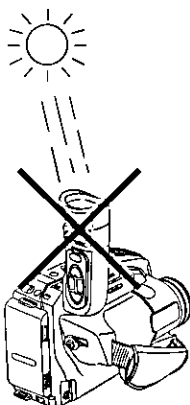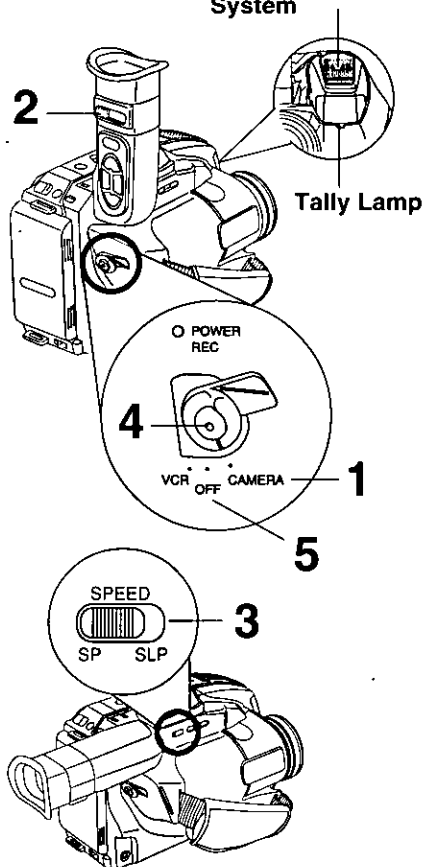

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 13).

1

Set **POWER** to **CAMERA**.

Lens Cover opens.

EVF

- Be sure **POWER** is fully turned to **CAMERA** position.

PAUSE

Record/Pause  
mode.

2

Look into Viewfinder and adjust Vision Adjustment control to your eyesight.

3

Slide TAPE SPEED to SP or SLP (page 13).

4

Press RECORD/PAUSE to start or pause recording.  
REC lamp lights during recording.  
Tally lamp also lights if set to ON (page 32).

RECORD

5

Set **Power** to **OFF** when finished.

- To remove cassette, slide **TAPE EJECT** in Record/Pause mode. (page 13).



## WARNING:

- Do not leave the camcorder with the EVF aimed directly at the sun. This may cause damage to the internal parts of the EVF.
- When Camcorder is aimed at excessively bright objects, or bright lights, a vertical bar may appear in the picture. This is normal for the CCD pick-up. Try to avoid this when possible.

# Camera Recording

## Stand-by Quick Release

If left in RECORD/PAUSE mode for 5 minutes, Camcorder switches to Stand-by mode to conserve battery. When set to ON, Stand-by Quick Release lets you resume recording by pressing RECORD/PAUSE two times. New camcorders will default to OFF.

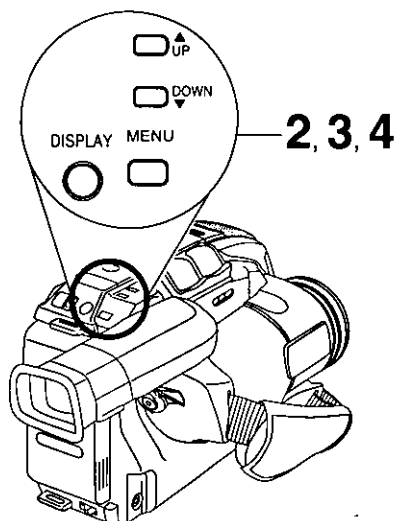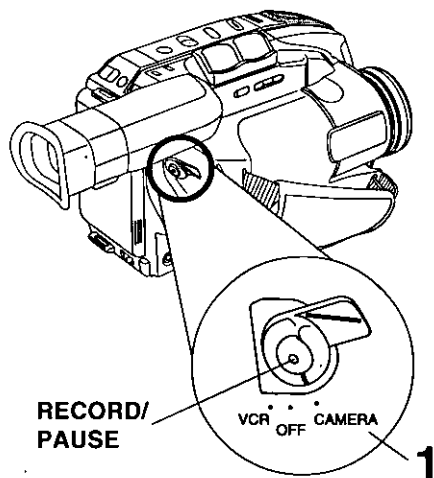

### Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 13).

**1** Set POWER to CAMERA.

**2** Press MENU for MENU mode.  
Press UP ▲ or DOWN ▼ to select  
**STAND-BY RELEASE**.

...	MENU	...	PAGE 1/2
PROGRAMMED REC			
TITLE	:	AUTO/MANUAL	
TALLY LAMP	:	ON	
STAND-BY RELEASE	:	ON	
CLOCK SET	:		
SELECT :	PUSH ▼/▲ KEY		
SET :	PUSH DISPLAY KEY		
END :	PUSH MENU KEY		

**3** Press DISPLAY to select ON/OFF.

**ON:** From Stand-by mode,  
press RECORD/PAUSE two times  
to resume recording.


**OFF:** From Stand-by mode,  
set POWER to OFF, then to  
CAMERA.  
Press RECORD/PAUSE to record.

**4** Press MENU to exit.

# Camera Recording


## Easy Edit Stand-by

For a smooth transition between scenes if recording is stopped, and then started within 24 hours.

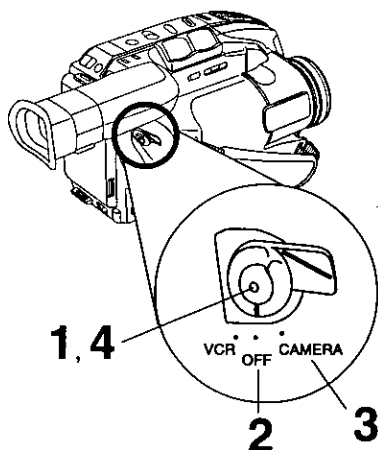

## Manual Easy Editing

For proper continuity when taping from Stop mode or after attaching a new Battery.

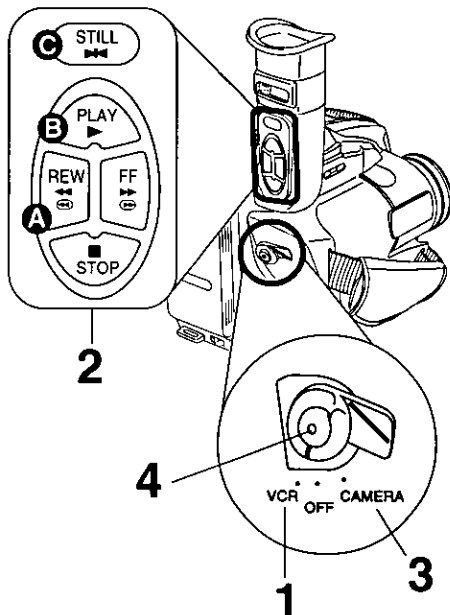

## Before you begin...

- Connect Camcorder to power source.
- Insert cassette with record tab (page 13).

- 1 Press **RECORD/PAUSE** to stop recording.
- 2 Set **POWER** to **OFF** and leave cassette in Camcorder.
- 3 To resume recording, set **POWER** to **CAMERA**,
- 4 Press **RECORD/PAUSE** to resume recording.

### Note:

- Use Manual Easy Edit (below) if more than 24 hours before recording is resumed.

## Before you begin...


- Connect Camcorder to power source.
- Insert cassette with record tab (page 13).

- 1 Set **POWER** to **VCR**.
- 2
  - A Press **REWIND/SEARCH** to rewind a few seconds of tape.
  - B Press **PLAY** to review recording.
  - C Press **STILL** where you want to continue recording.
- 3 Set **POWER** to **CAMERA**.
- 4 Press **RECORD/PAUSE** to resume recording.

# Camera Recording

## Programmed Recording

Set a recording start and stop time. Or, set a 5 or 10 second interval recording to be done each minute.

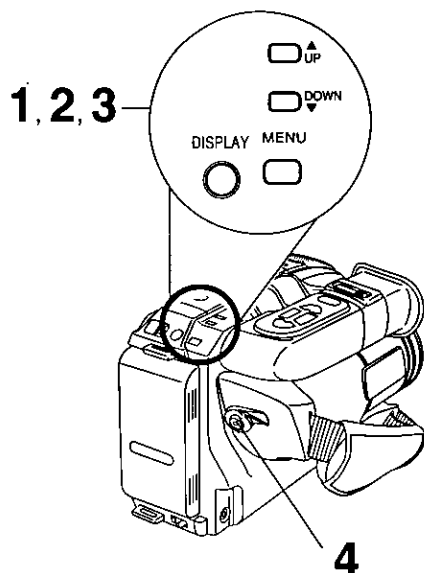

## Before you begin...

- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 13).
- Set POWER to CAMERA.

- 1** Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **PROGRAMMED REC.**

--- MENU --- PAGE 1/2  
**PROGRAMMED REC.**  
TITLE : AUTO/MANUAL  
TALLY LAMP : ON  
STAND-BY RELEASE : OFF  
CLOCK SET  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

- 2** Press **DISPLAY**. (Current time is displayed.)  
Each additional press of **DISPLAY** increases start time by 30 minutes.

START : 10:20PM  
REC TIME : 10MIN.  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
START : PUSH RECORD KEY  
CANCEL : PUSH MENU KEY  
10:20:00PM

- 3** Press **DOWN ▼** to select **REC TIME**. Press **DISPLAY** repeatedly to select one of the options shown at the left.

START : 10:30PM  
**REC TIME : 10MIN.**  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
START : PUSH RECORD KEY  
CANCEL : PUSH MENU KEY  
10:20:00PM

To cancel the setup, press **MENU** twice.

- 4** Press **RECORD/PAUSE** to place Camcorder in stand-by mode.

STAND-BY  
START : 10:30PM  
REC TIME : 10MIN.  
10:20:00PM  
JUN 1 1999

### Note:


- Start time may not be set over 24 hours from current time.
- Camcorder shuts off at tape end, or 12 hours after Interval Recording starts.
- To cancel, set POWER to OFF.

Recording will be done as scheduled.



# Playing Back Recordings

## Playback using the Color EVF

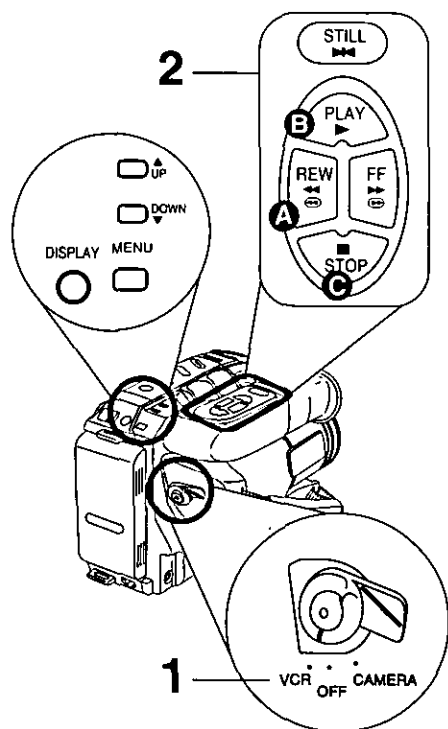

### Before you begin...

- Connect Camcorder to power source.
- Insert recorded tape.

1

#### Set **POWER** to **VCR**.

- If tape has no record tab, auto playback begins.

2

#### Playback function buttons.

- A** **REW(ind)** : rewind tape.
- B** **PLAY** : play tape.
- C** **STOP** : stop tape.

## Special Effects

### Quick Visual Search

#### Search Speed

- SP (Standard Play) : 3 times normal.
- SLP (Super Long Play) : 9 times normal.

#### During playback, press:

**FF** : fast forward search

**REW** : rewind search

Press again or **PLAY** for normal play.

### Still Picture

Press **STILL** to freeze picture.


Press again for normal play.

This feature works best in SLP mode (pages 13, 21).

### Note:

- During search, horizontal noise bars will appear. Audio is muted.
- To protect video heads and tape, operating modes will revert as follows after 5 minutes:  
Still → Stand-by  
Stand-by → Power off (when Battery Pack is used).
- Tape auto-rewinds if played or fast forwarded to end.

## Tracking Control

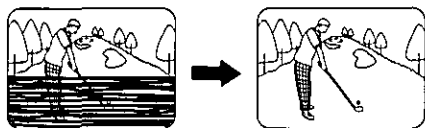

### Auto Tracking

Continuously analyzes each recording for optimum picture quality.

### Manual Tracking

Some recordings require manual adjustment to reduce noise.

Press **UP ▲** or **DOWN ▼** until Playback picture clears up.


Press **DISPLAY** to return to Auto Tracking.

# Playing Back Recordings


## TV Playback or Viewing

Connect Camcorder to a TV to view playback or recordings in progress.

### TV with AUDIO/VIDEO IN Jacks.

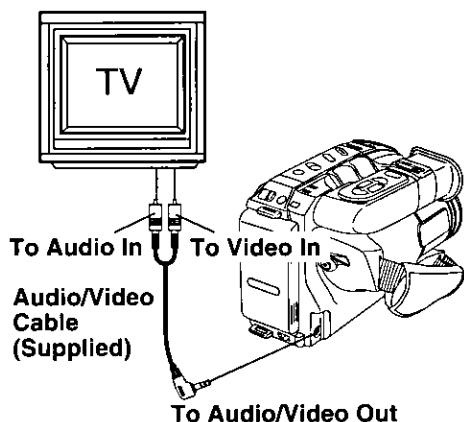

### TV without AUDIO/VIDEO IN Jacks.

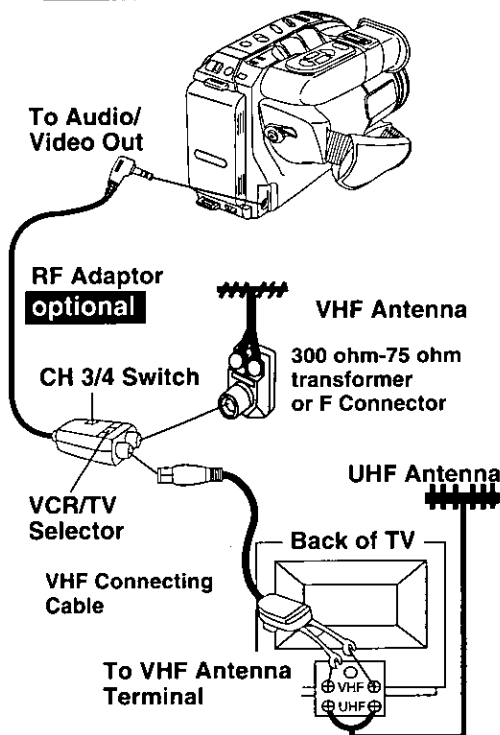

## Before you begin...

- Connect Camcorder to power source.
- Make all TV-Camcorder connections.

1

Set POWER to:

VCR → view playback.

CAMERA → view picture as it is recorded.

2

Turn TV ON and set to LINE INPUT.

See TV owner's manual.

3

Begin playback or recording.

If TV has no VIDEO/AUDIO IN jacks, connect **PV-RF16 RF Adaptor (optional)**. Tune TV to CH 3 or 4 to match RF Adaptor 3/4 switch. Set Adaptor's TV/VCR switch to VCR for playback.

To watch TV only, turn TV on without AUDIO/VIDEO IN Jacks connected (left).


- Set Camcorder POWER to OFF.
- Set RF Adaptor VCR/TV Selector to TV.
- Turn TV ON and select channel.

## CATV System Installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

# Playing Back Recordings in a VCR


## Load Battery in PlayPak

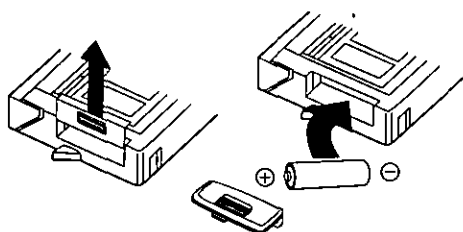


Remove Battery lid and insert AA battery.

- Do not reverse polarity.
- Replace battery when tape loading/unloading takes longer than usual.


## Insert VHS Cassette in PlayPak

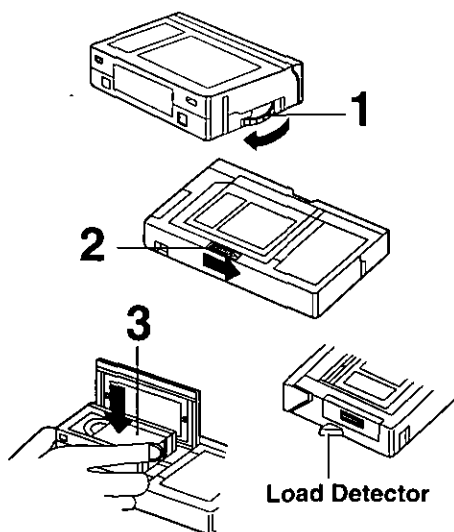

- 1 Turn **VHS** cassette **Tape Wheel** in direction of arrow to take up any slack.
  - 2 Slide **RELEASE** to open cassette lid.
  - 3 Insert the **VHS** cassette with the window up and on the left, then snap lid shut.
- Do not obstruct cassette reel while loading.
  - Allow PlayPak Load Detector to fully retract before using in VHS VCR.

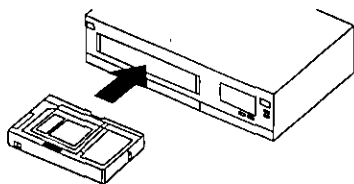


## Remove VHS Cassette

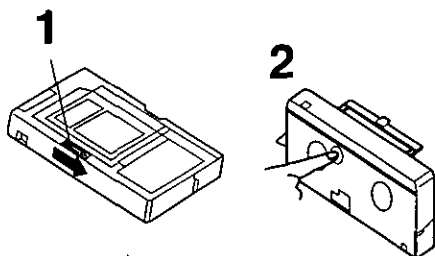

- 1 Slide **RELEASE** and wait for lid to open.
- 2 Push cassette out through hole in bottom of PlayPak with your finger.

# Copying your Tapes (dubbing)

## Connections

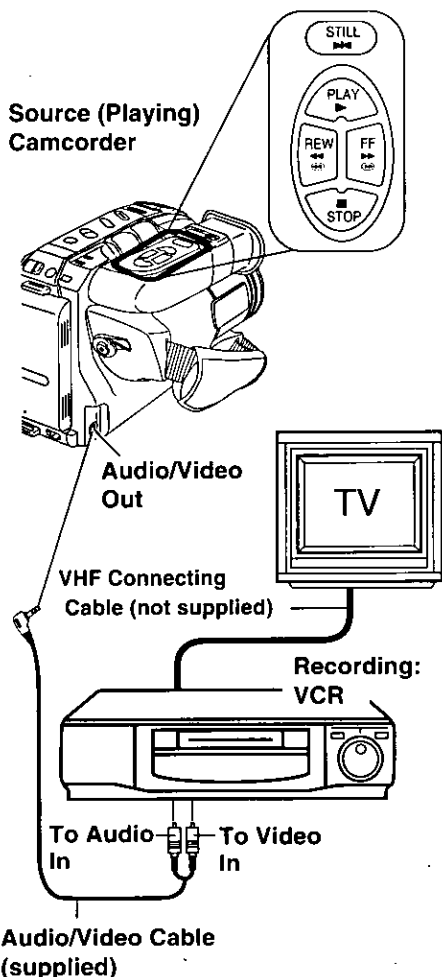

## Before you begin...

- Make Camcorder-VCR connections (see left).
- Turn both units on.
- Set VCR input signal to LINE.  
Please see VCR owner's manual.
- Set Camcorder POWER to VCR.

- 1 Insert a pre-recorded tape into Camcorder and a blank tape with record tab into VCR.
- 2 Press **PLAY** on Camcorder, then press **STILL** at starting point.
- 3 Press **REC**, then **STILL/PAUSE** on VCR.
- 4 Press **STILL** on Camcorder and **STILL/PAUSE** on VCR again to start copying.
- 5 Press **STOP** on both units to stop copying.

## Note:

- Camcorder will only playback tapes recorded in SP or SLP mode.
- Dubbing may reduce picture quality.

## Monitor with your TV

- Turn TV on and tune to VCR channel (CH3 or CH4).
- Set VCR/TV Selector on VCR to VCR.


## CAUTION:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

# Power Zoom / Backlight

## Four-Speed Power Zoom

Zoom in (close up) and out (wide angle) in one of four speeds ranging from slow (16 sec.) to fast (2 sec.).

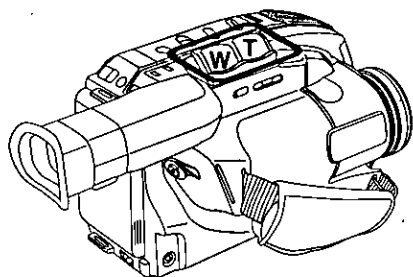

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

### Zoom In ("T")



### Zoom Out ("W")

## Zoom slowly:


Lightly press "T" (telephoto) or "W" (wide angle) POWER ZOOM button.

## Zoom quickly:

Apply more pressure to the button.

## Backlight

Use when subject is darker than surroundings, in shadowed area, or in front of the light source.

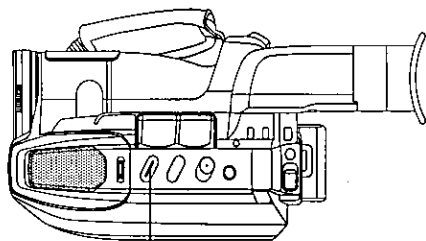

BACKLIGHT




## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

Press **BACKLIGHT** while recording to select the level of backlight compensation.


In normal lighting, press **BACKLIGHT** repeatedly until no indicator displayed.

## EVF Indications

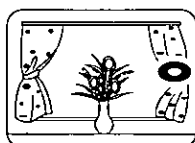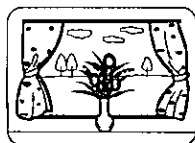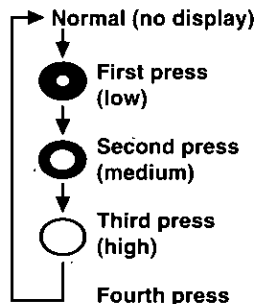

# Focus

## Auto Focus

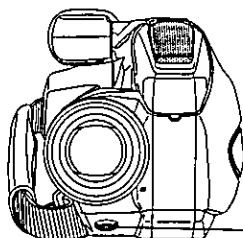

MANUAL  
FOCUS

## Manual Focus

Use Manual Focus (MF) when :

- recording through glass.
- lighting is poor.
- subject is far away with objects in foreground.
- subject has distinct horizontal lines.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


Camcorder automatically focuses on subject even during zooming.

Auto Focus is on when "MF" is not displayed in EVF. Push **MANUAL FOCUS** to remove "MF" in EVF if necessary.

- subject is not centered in Viewfinder.
- subject has shiny surface.
- subject is slanted.
- subject is bright and flat, like a white wall.
- subject has fast motion, like a golf swing.

- 1 Push **MANUAL FOCUS** so "MF" (Manual Focus) appears in EVF.

EVF Indication

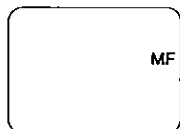

- 2 Hold down "T" (telephoto) on POWER ZOOM to maximum zoom in.

- 3 Turn **MANUAL FOCUS** until subject is in focus.
  - Back away from subject if necessary.

- 4 Hold down "W" (wide angle) on POWER ZOOM as desired.

- Refocus as needed when aiming at new scenes.

## Macro Focus (close-ups)

Auto Focus functions up to 1/2 inch (12.7mm) from subject.

Hold down "W" on POWER ZOOM to maximum wide angle.

Bring Camcorder up close to the subject.

# High Speed Shutter

Improves Still or Slow Motion playback picture of high speed subjects (e.g. a tennis stroke), when viewed on Camcorder or 3 or 4 head VCR.

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 13).


## Auto Shutter

In **AUTO** mode (no indication in EVF), shutter speed is auto-adjusted from 1/60 to 1/350 according to subject brightness.


- **AUTO** mode is selected each time **POWER** is set to **CAMERA**.

## Manual Selection

The faster the shutter speed, the more light is needed for proper picture and color quality. High Speed Shutter indication flashes if light is inadequate. Provide additional light.

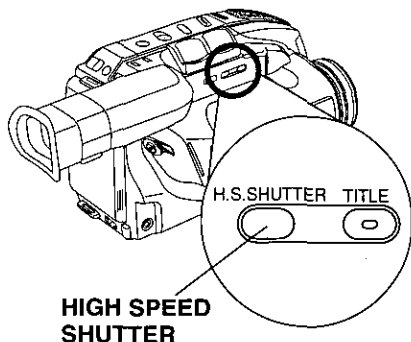

- 1 Press **HIGH SPEED SHUTTER** while recording.
- 2 Press repeatedly to change shutter speed. (See below, left.)

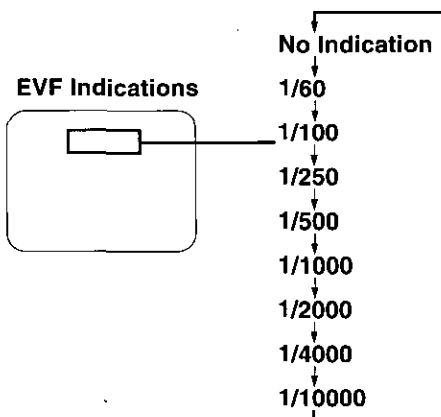



### Note:

- Provide additional halogen or tungsten light for use indoors or in poor light. Fluorescent light degrades picture.
- Auto Focus may not function properly if high speed shutter is used in inadequate light.
- Setting reverts to **AUTO** each time **POWER** is set to **CAMERA**.

# Tally Lamp

## Tally Lamp

The tally lamp can be set to come on or stay off during recording.  
New camcorder's default setting is ON.

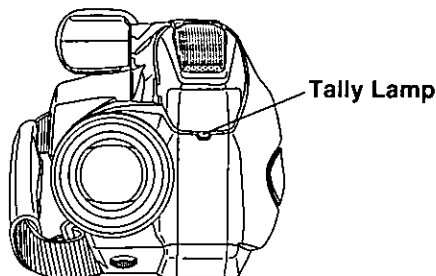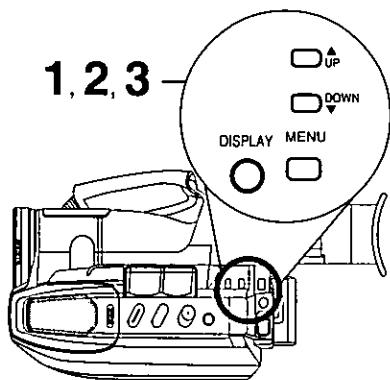

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Insert cassette with record tab (page 13).

1

Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select  
**TALLY LAMP**.

```
--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE       : AUTOMANUAL
TALLY LAMP  : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET     : PUSH DISPLAY KEY
END     : PUSH MENU KEY
```

2

Press **DISPLAY** to select:  
**ON** → lamp lights during recording.  
**OFF** → lamp stays off.




3

Press **MENU** to exit.



## Auto Fade


An interesting way to open and close scenes.

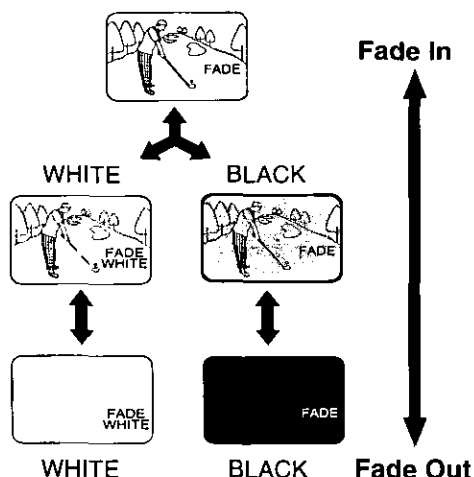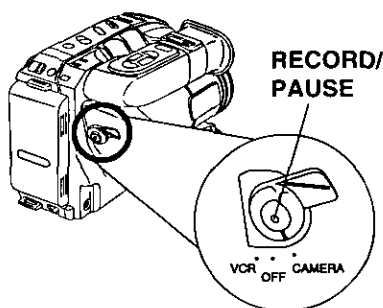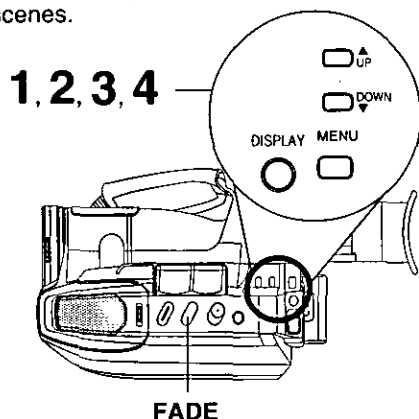


## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.


**1** Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **VIDEO EFFECTS**.

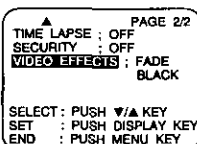

**2** Press **DISPLAY** for VIDEO EFFECTS menu.  
Press **UP ▲** or **DOWN ▼** to select **AUTO FADE**.

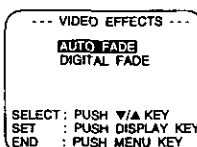

**3** Press **DISPLAY** for AUTO FADE ; COLOR menu.  
Press **UP ▲** or **DOWN ▼** to select BLACK or WHITE.

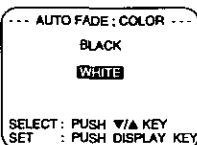

**4** Press **DISPLAY** to confirm entry.  
Press **MENU** to exit.

## Fade In:

In RECORD/PAUSE mode, press **FADE** so "FADE" flashes in EVF.

Press **RECORD/PAUSE**.

Recording starts as picture and sound gradually fade in.

## Fade Out:

While recording, press **FADE** so "FADE" flashes in EVF.

Press **RECORD/PAUSE**.



Picture and sound gradually fade out, and recording is paused.

If FADE is pressed accidentally, press again so "FADE" disappears in EVF.

# Fade

## Color Digital Fade

Choose from 7 fade effects in 8 different colors.

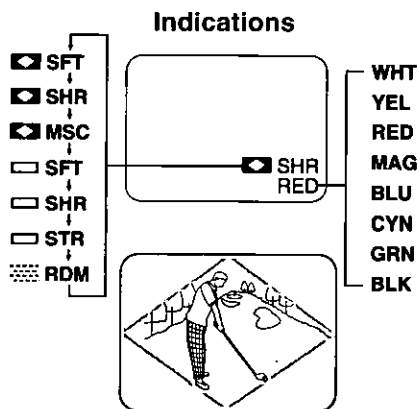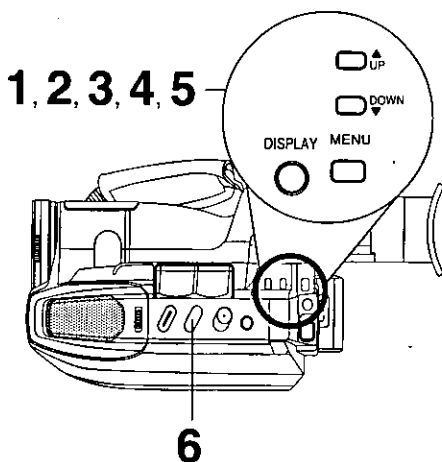

■ For more effects, stop fade in or fade out at any time (except RANDOM mode) by pressing FADE. Then, press FADE to resume fade.

### Note:

- Audio is not affected by fade.
- To cancel Digital Fade, do steps 1, 2, and 5. In step 2, select AUTO FADE.

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

**1** Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **VIDEO EFFECTS**.

▲ PAGE 2/2  
TIME LAPSE : OFF  
SECURITY : OFF  
VIDEO EFFECTS : FADE  
BLACK  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

**2** Press **DISPLAY** for VIDEO EFFECTS menu. Press **DOWN ▼** to select **DIGITAL FADE**.

--- VIDEO EFFECTS ---  
AUTO FADE  
DIGITAL FADE  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

**3** Press **DISPLAY** for DIGITAL FADE menu. Press **UP ▲** or **DOWN ▼** to select **TYPE**. Press **DISPLAY** for TYPE menu. Press **UP ▲** or **DOWN ▼** to select from 7 types.

--- DIGITAL FADE ---  
TYPE : ☒ SOFT  
COLOR : WHITE  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

-- DIGITAL FADE : TYPE --  
☒ SOFT ☐ SHARP  
☐ SHARP ☐ STRIPE  
☐ MOSAIC ☐ RANDOM  
☐ SOFT  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY

**4** Press **DISPLAY** for DIGITAL FADE menu. Press **DOWN ▼** to select **COLOR**. Press **DISPLAY** for COLOR menu. Press **UP ▲** or **DOWN ▼** to select from 8 colors.

--- DIGITAL FADE ---  
TYPE : ☒ SOFT  
COLOR : WHITE  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY  
END : PUSH MENU KEY

-- DIGITAL FADE : COLOR --  
WHITE BLUE  
YELLOW CYAN  
RED GREEN  
MAGENTA BLACK  
SELECT : PUSH ▼/▲ KEY  
SET : PUSH DISPLAY KEY


**5** Press **DISPLAY** to confirm entry. Press **MENU** twice to exit.

**6** Press **FADE** to fade out during recording (selected fade type flashes). Press **FADE** again to fade in.


Power Zoom magnification is digitally increased.

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.

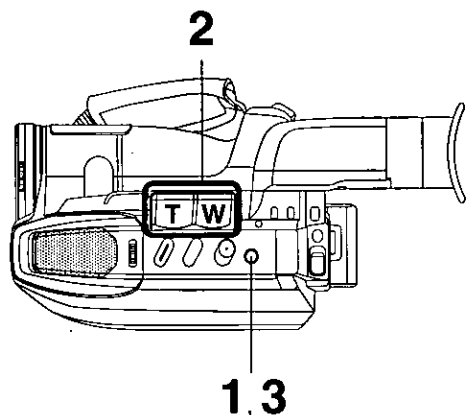


- 1 Press DIGITAL ZOOM.**  
D.ZOOM mode (150× maximum).  
Higher digital magnification levels may cause picture distortion.
- 2 Hold down "T" on POWER ZOOM.**  
Digital Zoom starts when normal zoom reaches maximum (26×).
  - Zoom level appears in EVF.
  - **POWER ZOOM** switch controls digital zoom level.
  - Normal zoom resumes when level falls to 26×.
- 3 Press DIGITAL ZOOM to turn off Digital Zoom so no indication appears.**

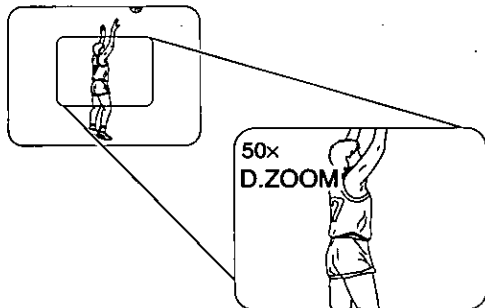


# Digital E.I.S.

## Digital Electronic Image Stabilization (E.I.S.)


Helps stabilize picture when recording in unstable situations.

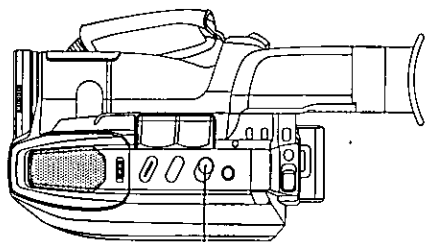

1, 2

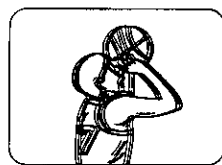

NORMAL

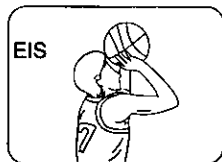

Digital EIS ON

### Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.

1

Press **EIS** to display "EIS" in the EVF.

- Image becomes slightly enlarged and shutter speed auto-adjusts from 1/80 to 1/350 according to brightness.
- Use High Speed Shutter (page 31) if needed. Shutter speed setting remains after EIS is canceled.


2

Press **EIS** again to cancel when not in use.

### E.I.S. may not function during...

- extreme Camcorder movement.
- recording of subject with distinct horizontal or vertical stripes.
- low light situations (EIS indicator flashes).
- intense fluorescent lighting situations.
- recording of very fast motion.

# Security Mode

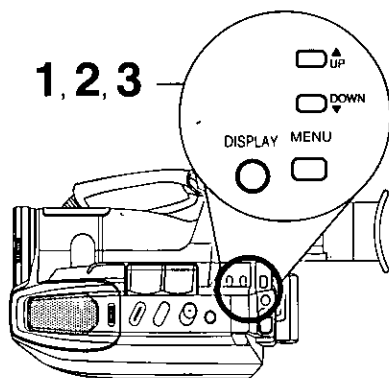


## Before you begin...

- Connect Camcorder to power source.  
Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 13).
- Set POWER to CAMERA.
- Securely position and aim Camcorder.


1

Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **SECURITY**.

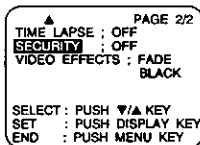


2

Press **DISPLAY** for SECURITY menu. Press **DOWN ▼** to select **MOTION**. Press **DISPLAY** to confirm entry.

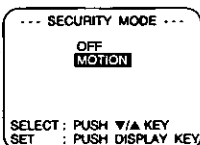

3

Press **MENU** for Motion Security stand-by mode. (If cassette is not inserted, "RE" will flash.)

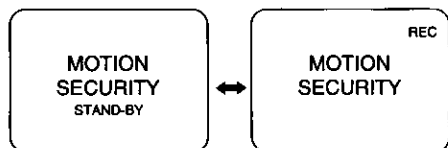

- Recording will start about 3 seconds after motion is detected.
- Date and time are recorded if displayed in EVF (page 19).
- Recording stops 30 seconds after motion ceases.

## Motion Security may mistakenly start when:

- background is plain, like a white wall, or has distinct vertical, horizontal, or slanted stripes, like a venetian blind.
- brightness suddenly changes.

## Motion Security may not start when:

- motion is very slow or fast.
- moving object is very small.
- motion occurs only in 1 corner of viewing area.
- in poor lighting (in this case, MOTION SECURITY flashes).
- background is plain, like a white wall, or has distinct horizontal or vertical stripes.



## Note:

- Security recording starts if Camcorder is bumped or repositioned.
- This feature is not available during normal recording.
- While in Security stand-by, the following functions are not available: Record/Pause, Stand-by mode, Digital E.I.S., Time Lapse, Auto Fade, Digital Fade.

To cancel Security Mode, set Power to **OFF**.

# Time Lapse

This feature reduces tape speed to 1/3 SLP for long term period recording (up to 6 hours with TC-40 tape).

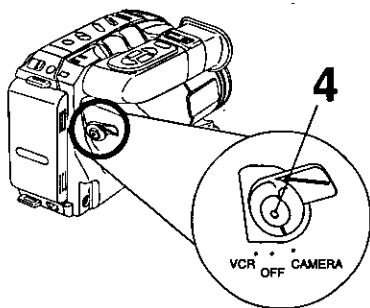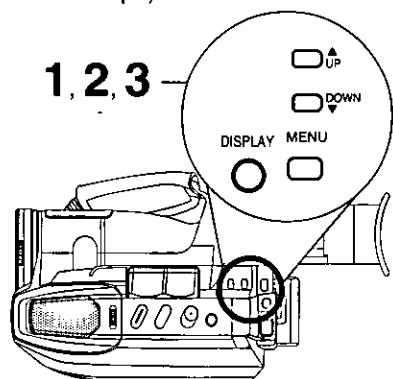

## In Time Lapse mode...

- Picture quality is degraded.
- Video noise may occur during playback.
- SP/SLP, titles, and 10-Second Reminder will not be displayed.
- Interval REC is not available.
- During playback, vertical jitter may occur depending on monitor used. It may also occur in the color-EVF.

## IMPORTANT:


- Time Lapse recording system is not part of VHS standard. Therefore, time lapse recordings should be played back on Camcorder only.
- Recordings other than time lapse may be played back on any **VHS** camcorder or **VHS** VCR.

## Before you begin...

- Connect Camcorder to power source. Use AC Adaptor for longer recordings.
- Insert cassette with record tab (page 13).
- Set **POWER** to **CAMERA**.
- Slide **TAPE SPEED** to **SLP**.

1

Press **MENU** for **MENU** mode.  
Press **UP** ▲ or **DOWN** ▼ to select **TIME LAPSE**.

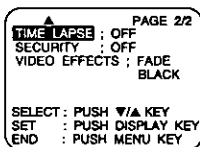

2

Press **DISPLAY** to select **ON**.  
**TIME LAPSE; ON**


Records at 1/3 SLP speed (up to 6 hours). Playback will be normal SLP speed. Sound is muted.

3

Press **MENU** to exit.

4

Start recording (page 21).

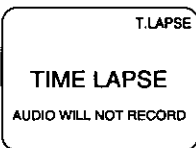



To cancel Time Lapse, select **OFF** in step 2 above.

## Note:

- If Time Lapse mode is selected, the following functions are not available:  
Security.

## Automatic Title

Camcorder auto-displays title greeting on selected holidays when power is first turned on. See title list on page 40.

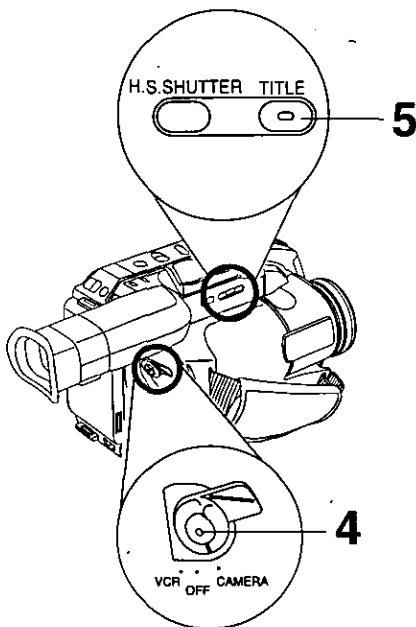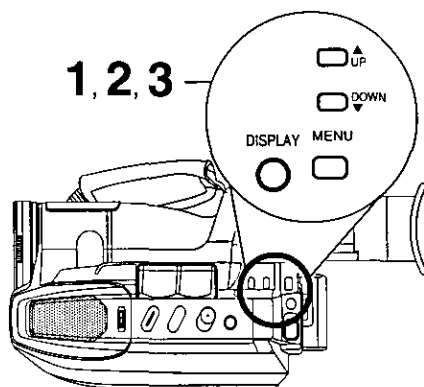

## Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 13).

- 1 Press **MENU** for MENU mode. Press **UP ▲** or **DOWN ▼** to select **TITLE**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE       : AUTO/MANUAL
TALLY LAMP   : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET     : PUSH DISPLAY KEY
END     : PUSH MENU KEY
    
```

- 2 Press **DISPLAY** to select **AUTO/MANUAL**.

- 3 Press **MENU** to exit.

- 4 To record the title, press **RECORD/PAUSE**.

- 5 Press **TITLE** to remove title during recording.

## Note:

- Once removed, title will not be auto-displayed. To redisplay, or select from other titles use Manual Title (page 40).

# Intelligent Titler

## Automatic/Manual Title Display List

Dec. 31–Jan. 1	HAPPY NEW YEAR! / CHEERS!
Feb. 14	VALENTINE'S DAY / BE MY VALENTINE
2nd Sunday in May	HAPPY MOTHER'S DAY / WE LOVE YOU!
Last Monday in May	MEMORIAL DAY
3rd Sunday in Jun.	HAPPY FATHER'S DAY / WE LOVE YOU!
Jul. 4	INDEPENDENCE DAY
1st Monday in Sep.	LABOR DAY
Oct. 31	HAPPY HALLOWEEN
4th Thursday in Nov.	HAPPY THANKSGIVING
Dec. 24–25	MERRY CHRISTMAS / HO! HO! HO!
These Titles must be displayed manually.	HAPPY EASTER HAPPY ANNIVERSARY HAPPY BIRTHDAY VACATION WEDDING DAY A SPECIAL DAY

## Manual Title

### Before you begin...

- Connect Camcorder to power source.
- Set **POWER** to **CAMERA**.
- Insert cassette with record tab (page 13).

**1** Confirm that **TITLE: AUTO/MANUAL** is set in Menu mode (steps 1–3, page 39).


**2** In Pause (Record mode), press **TITLE** repeatedly to display titles from list above.

**3** To record the title, Press **RECORD/PAUSE**.

**4** Press **TITLE** while recording to remove title.


### Note:

- To redisplay title, press **TITLE** in Pause (Record mode).

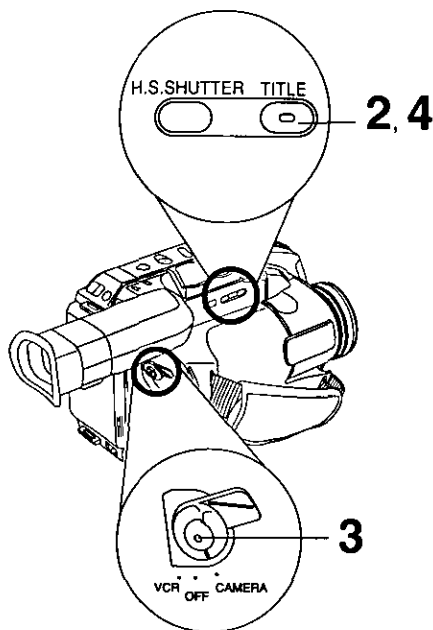



## Phrase Title

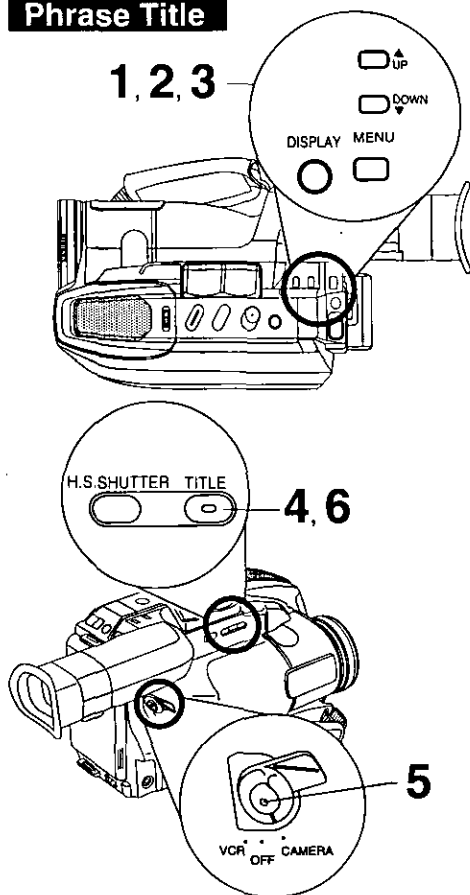

(no indication)

BEAUTIFUL

BRAVO!

CHEERS!

CONGRATULATIONS

GIMME A BREAK!

GOOD LUCK

I LOVE YOU

OOPS!

OUR LITTLE ANGEL

WAY TO GO

## Before you begin...

- Connect Camcorder to power source.
- Set POWER to CAMERA.
- Insert cassette with record tab (page 13).

### 1

Press **MENU** for MENU mode.  
Press **UP ▲** or **DOWN ▼** to select **TITLE**.

```

--- MENU --- PAGE 1/2
PROGRAMMED REC
TITLE : PHRASE
TALLY LAMP : ON
STAND-BY RELEASE : OFF
CLOCK SET
SELECT : PUSH ▼/▲ KEY
SET : PUSH DISPLAY KEY
END : PUSH MENU KEY
    
```

### 2

Press **DISPLAY** to select PHRASE.

### 3

Press **MENU** to exit.

### 4

In Pause (Record mode), press **TITLE** repeatedly to display phrases from list below, left.

### 5

To record the phrases, Press **RECORD/PAUSE**.

### 6


Press **TITLE** while recording to remove phrase.

## Note:

- To redisplay phrase, press TITLE in Pause (Record mode).


# Electronic Viewfinder Indications

Tape remaining and battery charge level can be displayed.

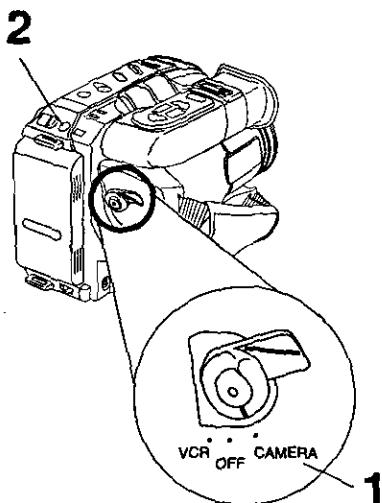

**1** Set **POWER** to **CAMERA**.

**2** Press **DISPLAY** repeatedly to select the following displays.

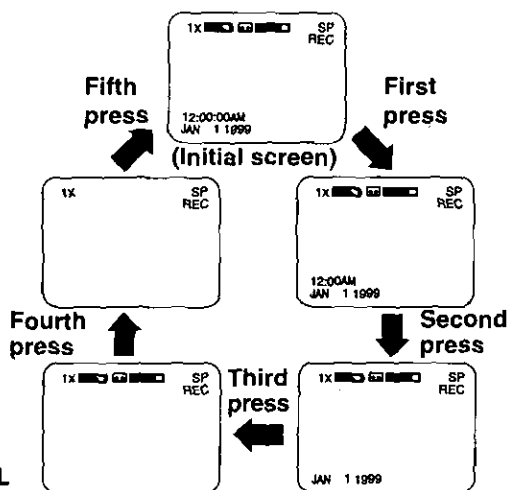

**Battery Remaining:**

FULL

EMPTY



**Tape Remaining:**

(No tape)





FULL  
EMPTY

• Tape remaining indicator operates a few seconds after tape starts moving.

## Recording the Date and Time

**1** Do steps 1 and 2 above to select time/date, date only, or no display.

**2** Start a recording (page 21).  
• Only the Date and/or Time are recorded.

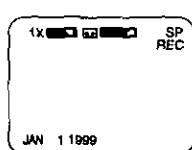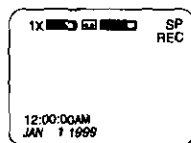


## Display-Off Mode

No Indication, except Intelligent Titler (pages 39~41), will be displayed.

Press **DISPLAY** and **STOP** together over 1 second.


Press **DISPLAY** repeatedly to remove time/date.

Indications are restored when Camcorder is turned off, and then on again.

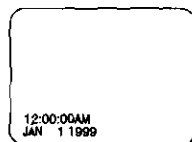

# Electronic Viewfinder Indications


## CAMERA/VCR mode

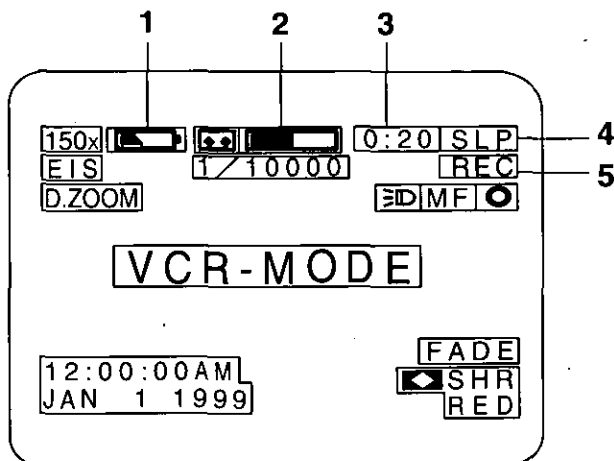


### 1 Battery Remaining (page 42)

"WARNING LOW BATTERY" appears and External Power Lamp starts flashing 15 seconds before Camcorder shutoff.

### 2 Tape Remaining

 - If cassette is not inserted or has no record tab in Camera (RECORD) mode, "" flashes 1 minute and "CHECK TAPE" appears 5 seconds before Camcorder shutoff.

- As end of tape is reached, "" flashes and "TAPE END" appears 5 seconds before Camcorder shutoff.

### 3 10-Second Reminder

Each time a recording is started, a 10 second incremental display (up to 59:50) lets you monitor how long one scene is recorded.

0:00 0:10 0:20 ..... 59:50



(return to 0:00 and continue)

### 4 TAPE SPEED (pages 13, 21, 38)

(SP=standard play, SLP=super long play, T.LAPSE=time lapse).

### 5 Operating Mode

REC (record)

PAUSE


FF (fast forward)

PLAY

REW (rewind)

# Electronic Viewfinder Indications

## CAMERA/VCR mode

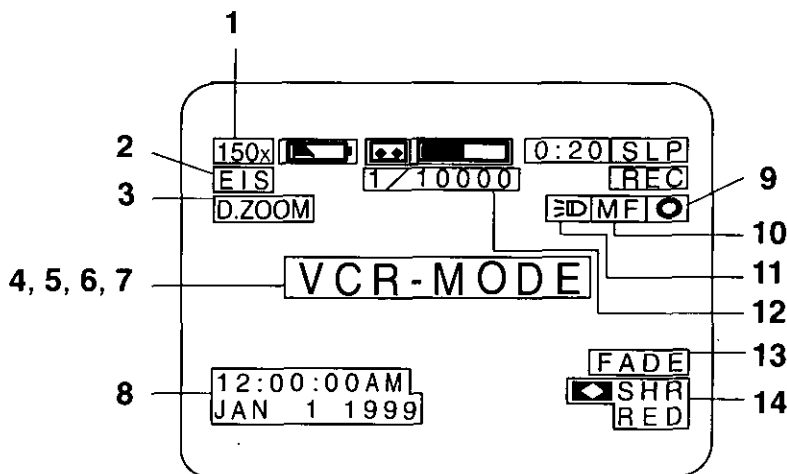


- |  |   |
|--|---|
| <b>1 Zoom Magnification level</b> (page 29).   | <b>9 Backlight</b> (page 29).           |
| <b>2 Digital E.I.S.</b> (page 36).   | <b>10 Manual Focus</b> (page 30).       |
| <b>3 Digital Zoom</b> (page 35).   | <b>11 Light ON/OFF</b> (page 20).       |
| <b>4 VCR-MODE</b><br>Appears 1 minute when POWER is set to VCR or if RECORD/PAUSE is pressed in VCR mode.  | <b>12 High Speed Shutter</b> (page 31). |
| <b>5 DEW</b><br>If moisture condensation occurs in unit, "WARNING DEW DETECTED" appears, Power Lamp flashes, and Camcorder will shutoff in 15 seconds. Wait until lamp no longer flashes when Camcorder is turned on to use. | <b>13 Fade</b> (page 33).               |
| <b>6 Time Lapse</b> (page 38).   | <b>14 Color Digital Fade</b> (page 34). |
| <b>7 Security Mode</b> (page 37).  |   |
| <b>8 Date and Time</b> (page 19).  |   |

## Attaching Optional Filters and Lenses

Remove the Lens Hood by turning it counterclockwise.

Then attach an optional filter or lens.

- Be careful not to touch the lens itself.
- Replace the Lens Hood after removing the accessory.

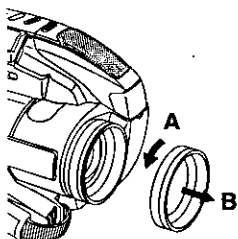

## Lens Hood Area Operation Caution



 
With a Wide or Telephoto conversion lens (optional) attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

When attaching the lens hood, a Wide or Telephoto conversion lens (optional), etc. after a filter (optional) has been attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

With two filters (optional) attached, the four corners of the screen may darken when zoom is set to maximum wide angle.

## Cleaning EVF (Electronic Viewfinder)

To Remove

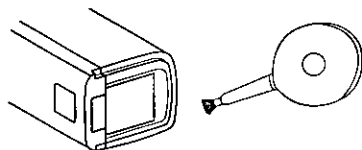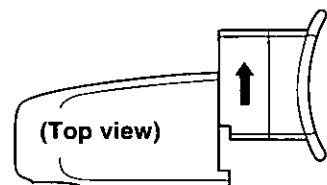

- 1** Slide and hold Eyepiece RELEASE button.
- 2** Slide the Eyepiece as shown. (DO NOT TWIST)
- 3** Remove lint or dust with lens blower (available where photography accessories are sold). Do NOT touch lens with fingers. Then, replace Eyepiece.

# Replacing Clock Battery


The clock battery is pre-installed. Follow the steps below if replacement becomes necessary.

## **WARNING:**

Replace battery with Panasonic PART NO. VSBW0004 (CR2025) only. Use of another battery may present a risk of fire or explosion.

Caution: Battery may explode if mistreated. Dispose of used battery promptly. Keep away from children. Do not recharge, disassemble or dispose of in fire.

## **Clock Battery**

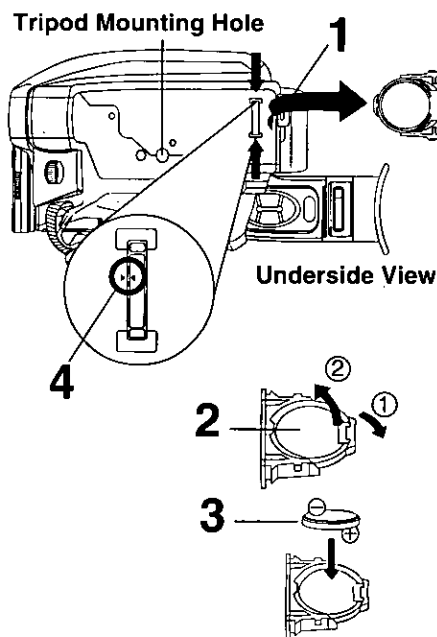

- 1** While pinching 2 tabs, pull Battery Tray out.
- 2** Bend 1 tab to remove Battery.
- 3** Snap new Battery (+ mark down) into Battery Tray.
  - Do not reverse the polarity.
- 4** Insert Battery Tray so the triangle marks meet.

## **Note:**

- Keep Battery out of children's reach. Swallowing it may be harmful.
- Improperly installed, discharged, or missing battery causes "CLOCK BATTERY" to appear when DISPLAY is pressed.
- Battery life is approximately 5 years.

# Palmcorder Accessory System

For ordering instructions, see the Accessory Order Form page.

- The listed standard battery use times are based on continuous recording using this Palmcorder.

Accessory #	Figure	Description	Price
PV-A17		AC Adaptor with DC Power Cable	\$130.00
HHR-V214		6.0Ah / 6 hr Battery Pack with Universal Battery Charger	\$200.00
P-V215		3.0Ah / 3 hr Battery Pack	\$60.00
PV-BP17/ P-V214		2.4Ah / 2 hr 30 min Battery Pack	\$50.00
PV-BP18/ P-V611		1.8Ah / 2 hr Battery Pack	\$45.00
PV-BP15/ P-V213		1.2Ah / 1 hr 10 min Battery Pack	\$45.00
PV-AA6		"AA" Battery Case	\$20.00
PV-C16		Car Battery Cord	\$70.00
PV-RF16		RF Adaptor	\$40.00
PV-P1		VHS PlayPak	\$35.00
PV-H18		Soft Sided Carrying Case	\$49.00

For Your Information

# Palmcorder Accessory Order Form

Please photocopy this form when placing an order.

1. Palmcorder Model # \_\_\_\_\_

2. Items Ordered

Accessory #	Description	Price Each	Quantity	Total Price
Subtotal				
Your State & Local Sales Tax				
Shipping & Handling				5.00
Total Enclosed				

3. Method of payment (check one)

- ☐ Check or Money Order enclosed (NO C.O.D.SHIPMENTS)
- ☐ VISA                      Credit Card # \_\_\_\_\_
- ☐ MasterCard              Expiration Date \_\_\_\_\_
- ☐ Discover                   Customer Signature \_\_\_\_\_

Make Check or Money Order to: MATSUSHITA ACCESSORIES

(Please do not send cash)

4. Shipping information (UPS delivery requires complete street address)

Ship To:

Mr.

Mrs.

Ms.

First

Last

Phone #:

Day ( )

Street Address

Night ( )

City

State

Zip

TO OBTAIN ANY OF OUR OMNIMOVIE/PALMCORDER ACCESSORIES YOU CAN DO ANY OF THE FOLLOWING:

VISIT YOUR LOCAL PANASONIC DEALER

OR

CALL PANASONIC'S ACCESSORY ORDER LINE AT 1-800-332-5368

[6 AM-5 PM M-F, 6 AM-10:30 AM SAT, PACIFIC TIME]

OR

MAIL THIS ORDER TO: PANASONIC SERVICES COMPANY ACCESSORY  
ORDER OFFICE

20421 84th Avenue South Kent, WA. 98032



# Specifications

<b>Power Source:</b>	Compact VHS Camcorder: DC 6V AC Adaptor: 110/120/220/240V AC, 50/60 Hz Battery: Nickel-Cadmium Type DC 6V
<b>Power Consumption:</b>	Compact VHS Camcorder: 6V DC 6.0 W (Max. 9.0 W) AC Adaptor: 24W 1.2W (when not in use.)
<b>Video Signal:</b>	EIA Standard (525 lines, 60 fields) NTSC color signal
<b>Video Recording System:</b>	2 rotary heads plus flying erase head. Helical scanning system
<b>Audio:</b>	1 track
<b>Pick-Up System:</b>	Sequential color difference field reverse system
<b>Pick-Up Device:</b>	One integral color filter Charge Coupled Device (CCD)
<b>Lens:</b>	26:1 zoom lens, F1:1.6 with auto iris control Focal length: 3.8mm - 98.8mm 4 speed power zoom function Lens filter diameter: 49mm
<b>Viewfinder:</b>	0.5 inch (12.7mm) Liquid Crystal color Electronic Viewfinder
<b>Minimum Illumination Required:</b>	0.8 lx (F1:1.6) 0.08 footcandles 7 lx (F1:1.6) 0.7 footcandles (EIA Standard)
<b>Operating Temperature:</b>	32°F~104°F (0°C~40°C)
<b>Operating Humidity:</b>	10%~75%
<b>Weight:</b>	Compact VHS Camcorder: 1.9 lbs. 0.89 kg AC Adaptor: 0.77 lbs. 0.35 kg
<b>Dimensions:</b>	Compact VHS Camcorder: 4 (W) × 4-5/8 (H) × 7-1/8 (D) inch 100 (W) × 118 (H) × 180 (D) mm AC Adaptor: 2-3/4 (W) × 1-5/8 (H) × 5-3/4 (D) inch 70 (W) × 41 (H) × 145 (D) mm

Weight and dimensions shown are approximate.

Designs and specifications are subject to change without notice.

# Before Requesting Service

If a problem arises, you may be able to correct it yourself.  
See Symptom and Correction list below.

Symptom	Correction
No picture in EVF ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 12)</li><li>• Set POWER to VCR or CAMERA. (pp. 21, 25)</li><li>• Check for Dew Indication. (p. 44)</li><li>• Use fully charged Battery. (p. 10)</li><li>• Firmly connect all needed cables. (p. 26)</li></ul>
Video cassette cannot be inserted ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 12)</li><li>• Insert cassette, window side facing out. (p. 13)</li></ul>
Video cassette cannot be removed ...	<ul style="list-style-type: none"><li>• Connect Power Source. (pp. 10, 12)</li></ul>
Operation buttons do not work ...	<ul style="list-style-type: none"><li>• Check for Dew Indication. (p. 44)</li></ul>
Recording cannot be done ...	<ul style="list-style-type: none"><li>• Make sure record tab is intact. (p. 13)</li><li>• Check Battery Indicator. (p. 42)</li><li>• Check for Dew Indication. (p. 44)</li></ul>
Auto Focus does not operate ...	<ul style="list-style-type: none"><li>• Set FOCUS to AUTO. (p. 30)</li><li>• Set POWER to CAMERA. (p. 21)</li></ul>
Sound from microphone can't be monitored ...	<ul style="list-style-type: none"><li>• Set unit to REC or Record/Pause mode.</li></ul>
Camera picture is too dark ...	<ul style="list-style-type: none"><li>• Turn HIGH SPEED SHUTTER off. (p. 31)</li></ul>
No playback picture, or the playback picture is noisy or contains streaks ...	<ul style="list-style-type: none"><li>• Press UP ▲/DOWN ▼ button during playback (Tracking Control). (p.25)</li></ul>
Playback picture is fast, and there is no sound ...	<ul style="list-style-type: none"><li>• Set TIME LAPSE to OFF in Menu mode. (p. 38)</li></ul>
"Panasonic ITS TAPES PLAY IN YOUR VCR..." appears in EVF and LCD Monitor ...	<ul style="list-style-type: none"><li>• Set POWER to CAMERA, then hold down STOP over 5 seconds to exit Demo mode. (p. 7)</li></ul>
Top of playback picture waves back and forth excessively ...	<ul style="list-style-type: none"><li>• A playback signal is not as stable as an off the air TV signal, so the top of your TV screen may appear bent or unstable during playback. This is called, "Horizontal AFC time constant change." To correct, slowly turn the TV horizontal hold control. If you TV does not have this control, or adjusting it does not help, contact your TV service center. (Some nominal service charges may be required.)</li></ul>

## Video Head Cleaning



**Clogged Video Head**

While head cleaning is normally not needed, playing old or damaged tapes may clog the heads. When playback picture resembles example at the left, head cleaning is required.

Ideally, head cleaning should be performed by a qualified service technician. When this is not possible, purchase a head cleaning cassette. Be sure to follow cleaning cassette instructions exactly and only use when symptoms occur.

# ***Request for Service Notice***

Please photocopy this form when making a request for service notice.

## **Request for Service Notice:**

In the unlikely event this product needs service.

- Please include your **proof of purchase**.  
(Failure to do so will delay your repair.)
- To further speed your repair please provide an explanation of what is wrong with the unit and any symptom it is exhibiting.

---

---

---

---

Mail this completed form and your Proof of Purchase along with your unit to:

Panasonic Services Company  
1705 N. Randall Road  
Elgin, IL. 60123-7847  
Attn: Camcorder Repair

**For Your Information**

# Warranty

**Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America**  
One Panasonic Way Secaucus,  
New Jersey 07094

**Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc.**  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

## PANASONIC/QUASAR Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS
VCR	ONE (1) YEAR	NINETY (90) DAYS
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS
MONITOR-VCR	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS

### Monitor-VCR In-home or carry-in Service: 22" (diagonal) CRT / LCD and Larger Monitor-VCR Carry-in Service: 21" (diagonal) CRT / LCD and smaller

**Batteries** (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

**Tape** (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-211-PANA(7262), to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above. THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 10/20/97

# Warranty

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

1-800-211-PANA(7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7am, EST.

Web Site: <http://www.panasonic.com>

You can purchase parts, accessories or locate your nearest servicer by visiting our Web Site.

## Accessory Purchases:

1-800-332-5368 (Customer Orders Only)

Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032

(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)

(Visa, MasterCard, Discover Card, American Express, Check)

## Product Repairs

## Centralized Factory Servicer

MAIL TO :

Panasonic Services Company  
1705 N. Randall Road,  
Elgin, IL 60123-7847

Attention: Camcorder Repair

Please carefully pack and ship, prepaid and insured, to the Elgin centralized repair Factory Servicer. While there will be added handling delays, you may bring your unit to one of the following locations who will then forward the unit to Elgin for repair.

Customer's in Puerto Rico, please ship or carry in to location below ("Service in Puerto Rico").

## Factory Servicenters Locations

### CALIFORNIA

6550 Katella Avenue  
Cypress, CA 90630

800 Dubuque Avenue  
S. San Francisco  
CA 94080

20201 Sherman Way  
Suite 102  
Canoga Park, CA 91306

3878 Ruffin Road  
Suite A  
San Diego, CA 92123

### COLORADO

1640 South Abilene  
Street Suite D  
Aurora, CO 80012

### FLORIDA

3700 North 29th Avenue  
Suite 102  
Hollywood, FL 33020

### GEORGIA

8655 Roswell Road  
Suite 100  
Atlanta, GA 30350

### ILLINOIS

9060 Golf Road  
Niles, IL 60714

1703 North Randall Road  
Elgin, IL 60123  
(Pick-up/drop-off only)

### MARYLAND

62 Mountain Road  
Glen Burnie, MD 21061

### MASSACHUSETTS

60 Glacier Drive  
Suite G  
Westwood, MA 02090

### MICHIGAN

37048 Van Dyke Avenue  
Sterling Heights,  
MI 48312

### MINNESOTA

7850-12th Avenue South  
Airport Business Center  
Bloomington, MN 55425

### OHIO

2236 Waycross Road  
Civic Center Plaza  
ForestPark, OH 45240

### PENNSYLVANIA

2221 Cabot Blvd. West  
Suite B  
Langhorne, PA 19047

Chartiers Valley  
Shopping Center  
1025 Washington Pike  
Bridgeville, PA 15017

### TENNESSEE

3800 Ezell Road  
Suite 806  
Nashville, TN 37211

### TEXAS

7482 Harwin Drive  
Houston, TX 77036

13615 Welch Road  
Suite 101  
Farmers Branch, TX  
75244

### WASHINGTON

20425-84th Avenue  
South  
Kent, WA 98032

### HAWAII

99-859 Iwaiwa Street  
Aiea, Hawaii 96701  
Phone (808) 488-1996  
Fax (808) 486-4369

## Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicer:

Ave. 65 de Infantería. Km. 9.5 San Gabriel Industrial Park Carolina, Puerto Rico 00985

Phone (787) 750-4300 Fax (787) 768-2910

For Your Information

# Index

<b>A</b>			<b>H</b>			<b>T</b>		
AC Adaptor	12		Hand Strap	14		Tab	13	
Accessories (Optional)	47		High Speed Shutter	31		Tally Lamp	32	
Accessories (Supplied)	2		HIGH SPEED			TAPE EJECT Switch		
Audio/Video Cable	26, 28		SHUTTER Button	31			8, 13	
Audio/Video Out	26, 28		<b>L</b>			TAPE SPEED Selector		
Auto Daylight			Lens Cover	21			13, 21	
Saving Time	18		Light	20		Time Lapse	38	
<b>B</b>			LIGHT Switch	20		TITLE Button	39, 40, 41	
Backlight	29		<b>M</b>			Titler	39, 40, 41	
BACKLIGHT Button	29		MANUAL FOCUS Wheel	30		Tracking Control	25	
Battery Pack	8, 10, 11		MENU Button			Tripod Mounting Hole	46	
BATTERY RELEASE			15, 17, 18, 19, 22, 24,			<b>U</b>		
Button	10		32, 33, 34, 37, 38, 39, 41			UP ▲/DOWN ▼ Button		
Built-in Twin Capsule			MENU Mode	15, 16			15, 25	
2-Way Microphone			<b>P</b>			<b>V</b>		
System	21		PLAY Button	9, 25		VHF Connecting Cable		
<b>C</b>			Playback	25, 26, 27			26, 28	
Camera Recording			PlayPak	27		Video Cassettes (tapes)	13	
21, 22, 23, 24			Power Lamp	43		Video Head Cleaning	50	
Car Battery Cord	12		Power Supply	10, 11, 12		Viewing	26	
Charging Battery	10		POWER Switch			Vision Adjustment Control	21	
Clock Battery	46		7, 8, 9, 21, 25			<b>W</b>		
Clock Set	17, 18, 19		POWER ZOOM Switch	29, 30		Warranty	52, 53	
Copying your Tapes	28		Programmed Recording	24		<b>Z</b>		
<b>D</b>			<b>R</b>			Zoom	29, 35	
DC IN	12		RECORD/PAUSE Button					
DC Power Cable	12		9, 21					
Digital E.I.S.	36		Replacing Battery	46				
DIGITAL ZOOM Button	35		Request for					
DISPLAY Button			Service Notice	51				
15, 17, 18, 19, 22, 24,			REWIND/SEARCH Button					
25, 32, 33, 34, 37, 38,			9, 25					
39, 41, 42			RF Adaptor	26				
Display-off Mode	42		<b>S</b>					
<b>E</b>			Safety Precautions	3				
EIS Button	36		Security Mode	37				
Electronic Viewfinder	45		Self Demo Mode	7				
Electronic Viewfinder			Shoulder Strap	14				
Indications	42, 43, 44		Specifications	49				
<b>F</b>			STILL Button	25				
Fade	33, 34		Still Picture	25				
FADE Button	33, 34		STOP Button	7, 9, 25				
FAST FORWARD/								
SEARCH Button	25							
Focus	30							

# Spanish Quick Use Guide/Guía Para Uso Rápido

## Antes de comenzar...


- Inserte un casete con lengüeta para prevención del grabado.

## Cargue la batería

Cargue completamente la batería antes de usarla.

2


**Inserte la batería.**  
La lámpara CHARGE se enciende y se apaga al terminar de cargar.  
**Desmunte la batería.**

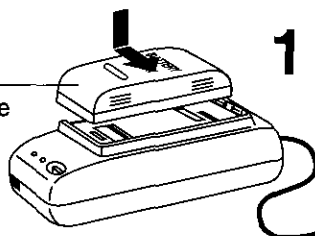

1

**Enchufe el adaptador de CA.**

## Inserte el casete

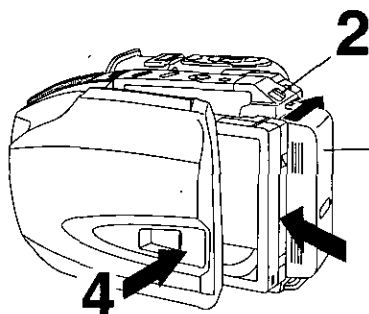

2

**Deslice TAPE EJECT para abrir la compuerta.**

1

**Coloque la batería cargada.**

3



**Inserte el casete.**

**Presione aquí para cerrar la compuerta.**

## Grabación con la videocámara

1

**Ajuste POWER a CAMERA.**

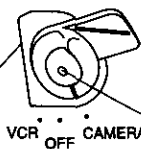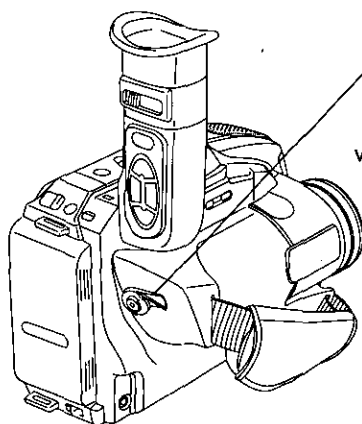

2

**Presione RECORD/PAUSE para comenzar la grabación.**  
**Presione RECORD/PAUSE otra vez para hacer una pausa en la grabación.**

PAUSE

REC

PAUSE


For Your Information

# Spanish Quick Use Guide/Guía Para Uso Rápido

## Antes de comenzar...

- Conecte la fuente de alimentación de la videocámara (batería o adaptador de CA)
- Inserte un casete con lengüeta para prevención del grabado.

## Reproduzca usando el Color EVF

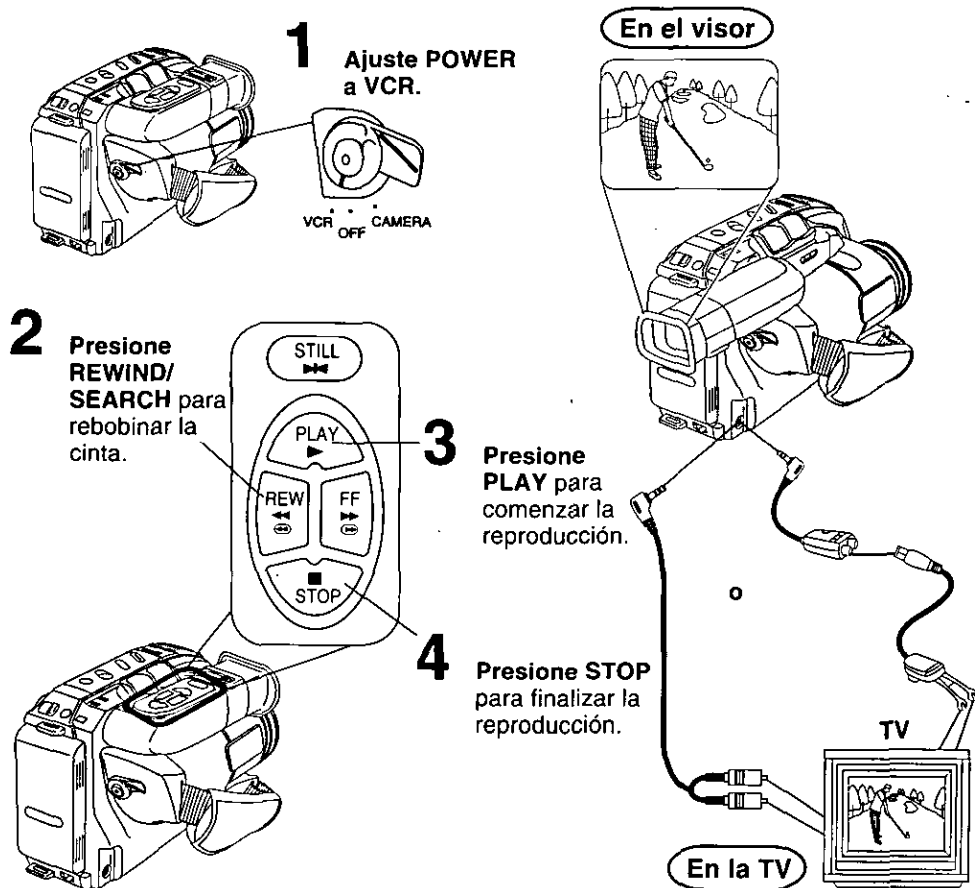

## Reproduccion con efectos especiales

### Para localizar rapidamente una escena especifica

- Oprimir el botón de localización (SEARCH).

### Para congelar una imagen

- Oprimir el botón de pausa/imagen fija (PAUSE/STILL).
- Oprimir nuevamente el botón cuando se desea continuar reproduciendo.

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic Way Secaucus,  
New Jersey 07094

Panasonic Sales Company,  
Division of Matsushita Electric of  
Puerto Rico, Inc. ("PSC")  
Ave. 65 de Infantería, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985